



Black and Decker LI2000 Handle Replacement

Replace the black handle casing.

Written By: Katherine Simmons



INTRODUCTION

Use this guide to remove or replace the handle casing of your Black and Decker LI2000.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Orange Casing



- Remove the following five screws
 - Three 20 mm Phillips #1 screws
 - One 10 mm #000 Phillips screw
 - One 13 mm Phillips 31 screw


⚠ When you remove the 13 mm screw, the spring may pop out of the screwdriver. Point the backside of the screwdriver away from your face and others.

Step 2



- Remove the black sticker with recycling information.

Step 3

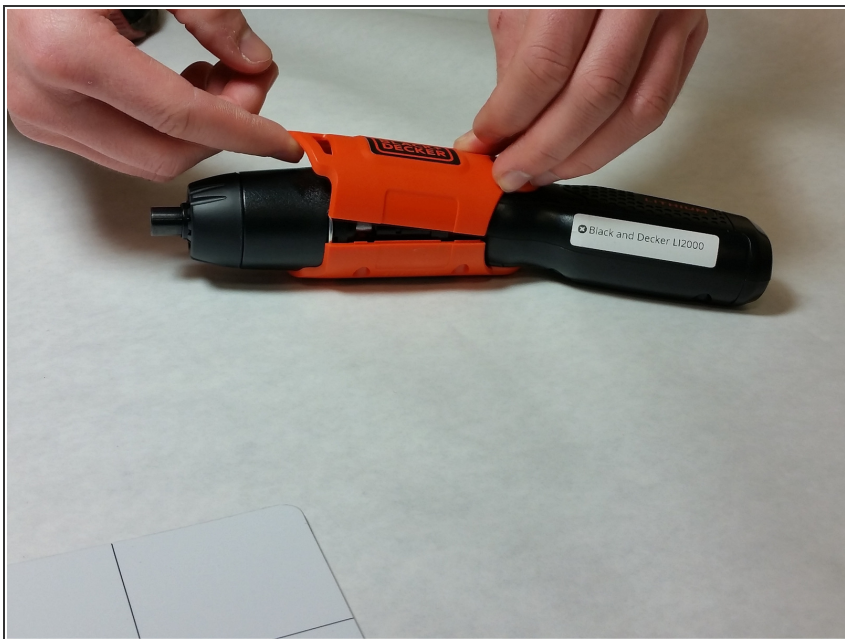

- Use your fingers or a plastic opening tool to pry the casing apart.

Step 4




- Remove the plastic slider by picking it up off the screwdriver.
- ⓘ You may consider leaving half of the casing on the screwdriver to make handling the screwdriver easier.

Step 5 — Handle



- Remove the four 15mm Phillips #1 screws.

Step 6

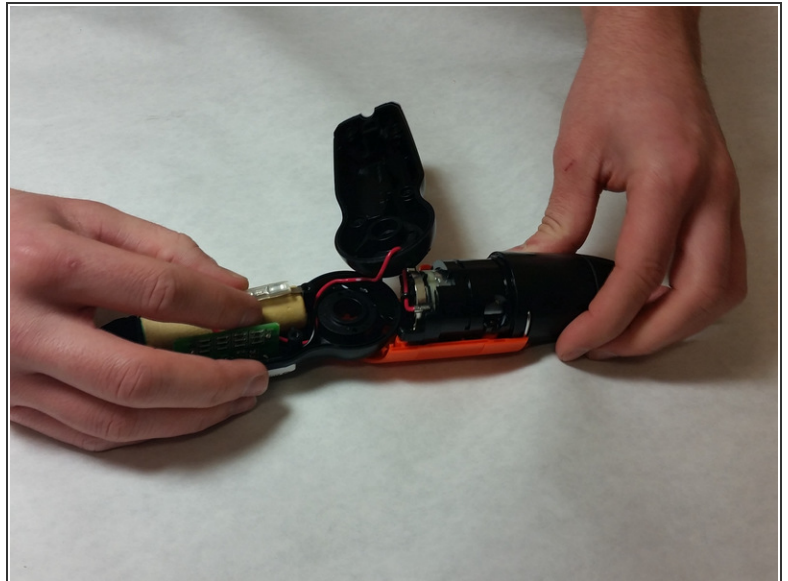

- Use a plastic opening tool to pry the casing apart.

To reassemble your device, follow these instructions in reverse order.

