



Bose SoundDock Portable v2 IR Receiver Replacement

Written By: Evan Low




INTRODUCTION

This guide will help you replace the IR receiver in your Bose speaker.

TOOLS:

- [T15 Torx Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — IR Receiver

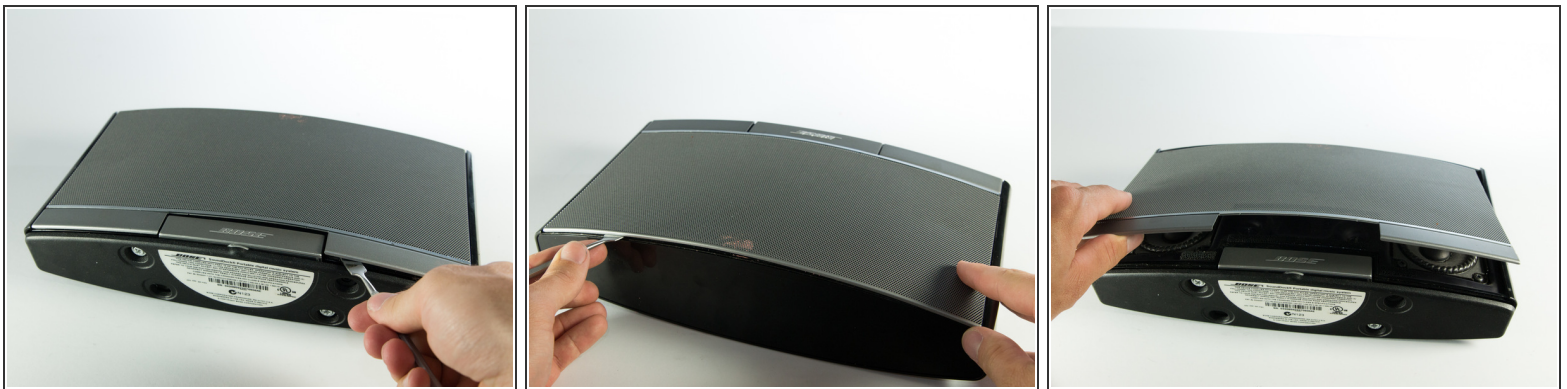

- Gently pry the front mesh cover off of the sound dock using a metal spudger.
- i** The mesh is held on by small velcro strips so if you hear a tearing sound it is just the velcro coming apart.

Step 2



- Using a T15 torx screwdriver, remove the 8mm screw holding the IR sensor to the speaker system.

Step 3



- Using tweezers or your fingers, gently remove the ribbon cable connecting the IR sensor to the system.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 01:36:04 AM.