




# Cen-Tech Seven Function Digital Multimeter Screen Replacement

This guide will show how to remove and replace dysfunctional screen.

Written By: Anna Kihm

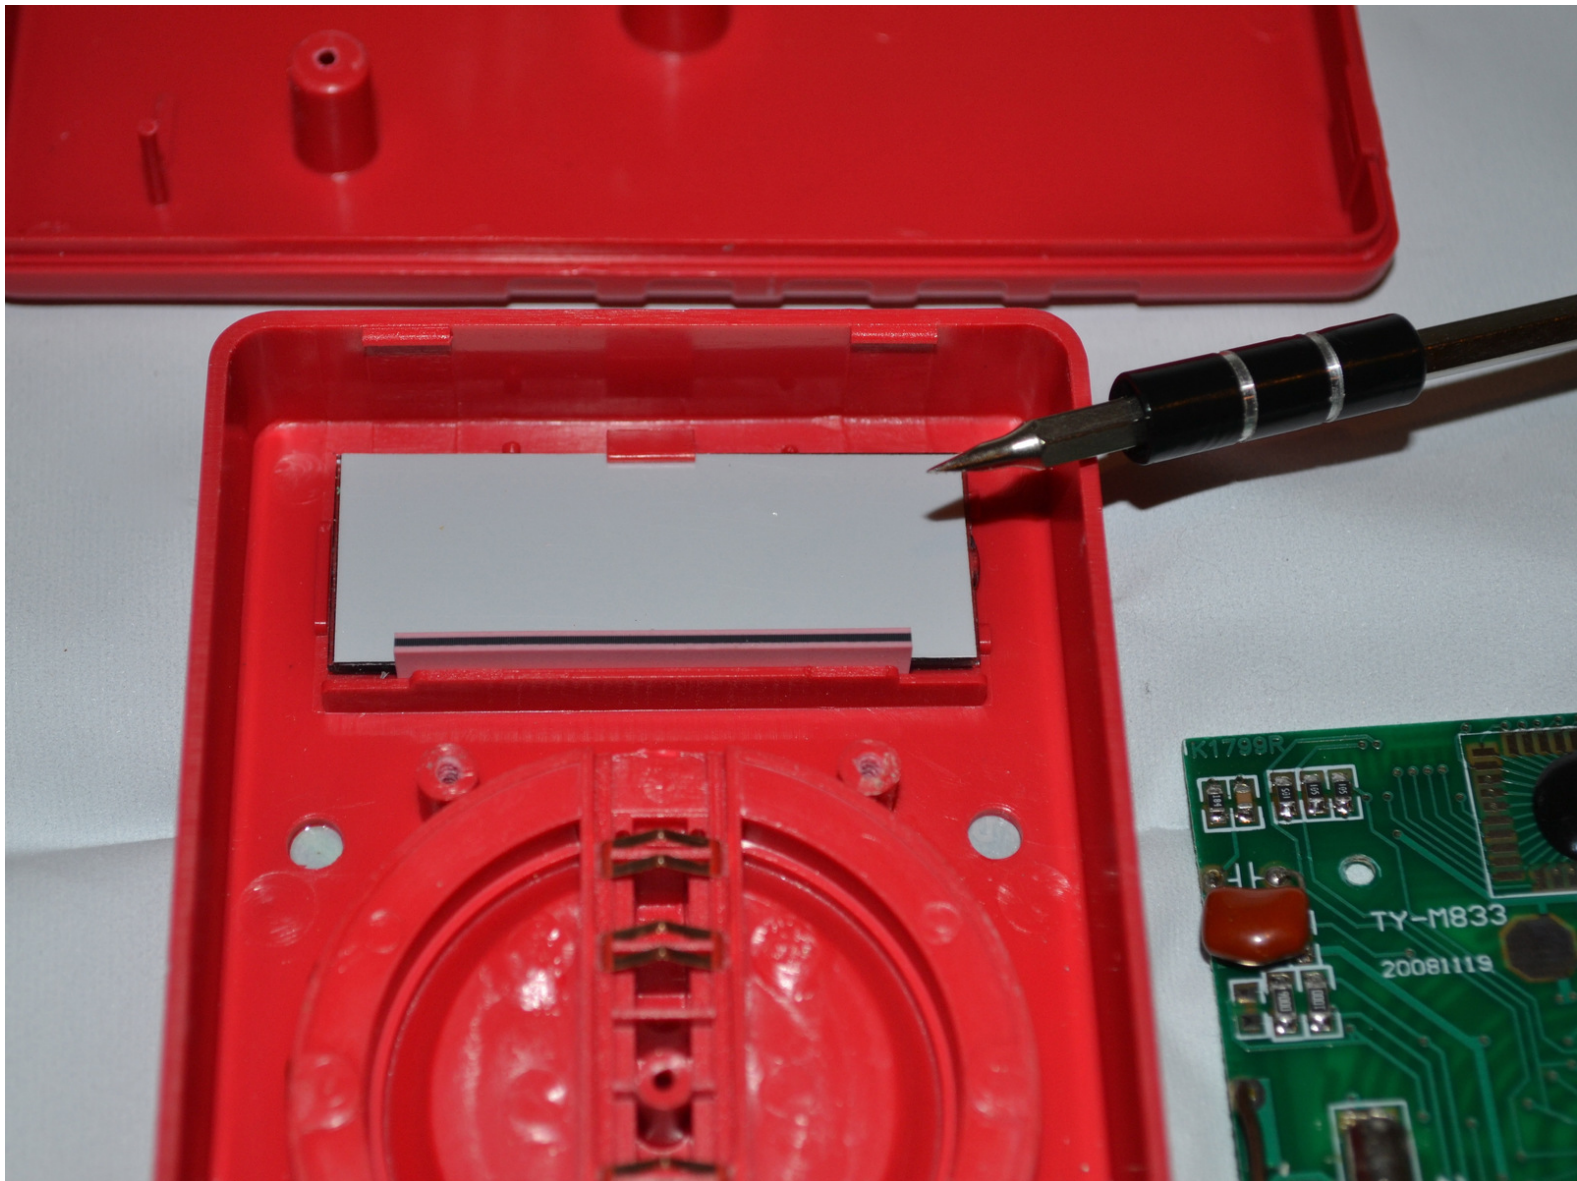

## INTRODUCTION

If the screen is cracked or not working it may be necessary to replace it. This guide will show how to conduct a screen replacement.



### TOOLS:

- [Flathead 2.5mm Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)



### PARTS:

- [Cen-Tech Seven Function Multimeter Screen](#) (1)
-

## Step 1 — Position Device



- Place the meter face down, so the back panel and screws can be seen.

## Step 2 — Remove Back Panel Screws



- Unscrew the two 9mm screws on the back panel using a #0 Phillips screwdriver.



### Step 3 — Remove Back Panel



- Remove the back panel of the device by lifting upward.
- Remove the battery from the meter before continuing.

### Step 4 — Unscrew Motherboard




- Using a 2.5 mm flat screwdriver, remove the four 7mm screws holding the circuit board in place.

## Step 5 — Remove Motherboard



- Gently lift the circuit board away from the device casing.
- ⓘ Remove the battery after removing the back cover to reduce the chances of short-circuiting the circuit board.

## Step 6 — Locate Screen

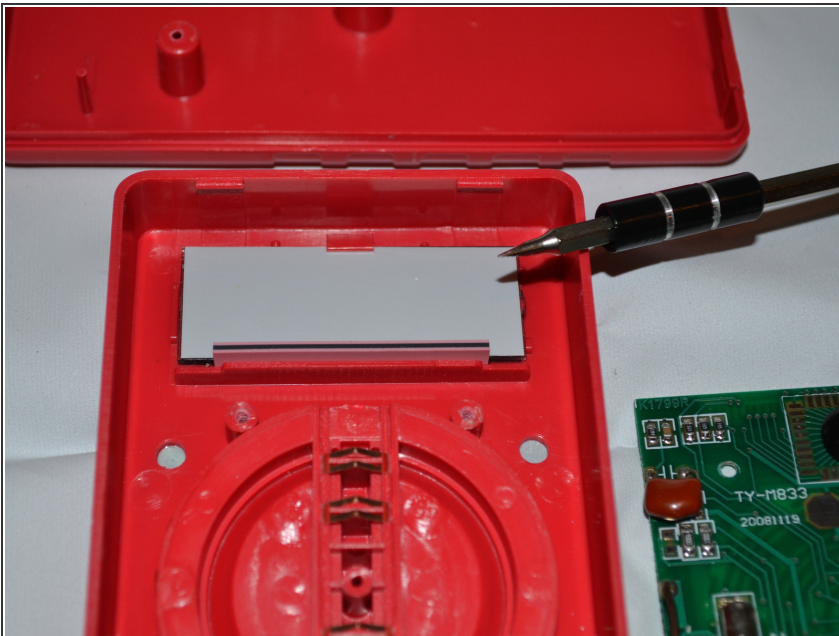

- The screen is located at the top of the device.



## Step 7 — Remove Screen



- Carefully remove screen from device by lifting upward.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-24 11:22:19 AM.