




Démontage de super-vario 40 display braille

vous allez accomplir le démontage complet de super vario 40 Baum

Written By: Sisyphé

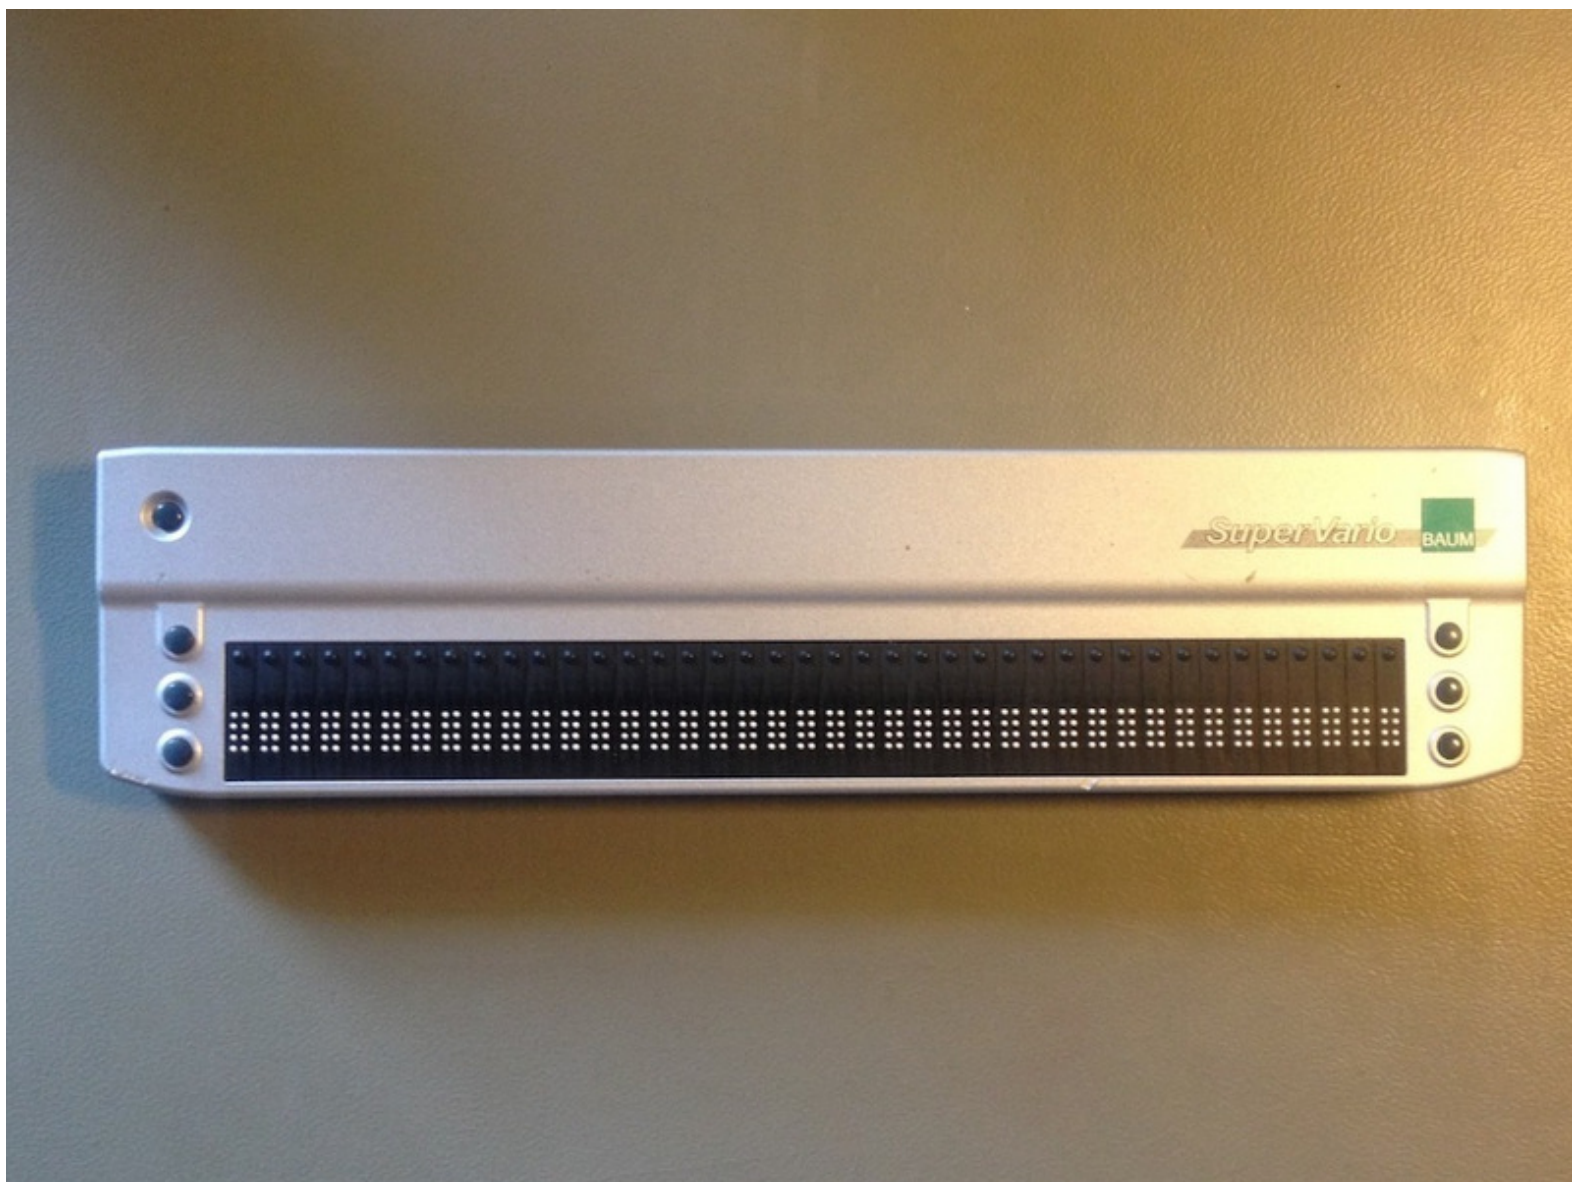

INTRODUCTION


this is braille display it use by deficient people too be able to read a monitor or pdf



TOOLS:




- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Braille displays afficheurs braille

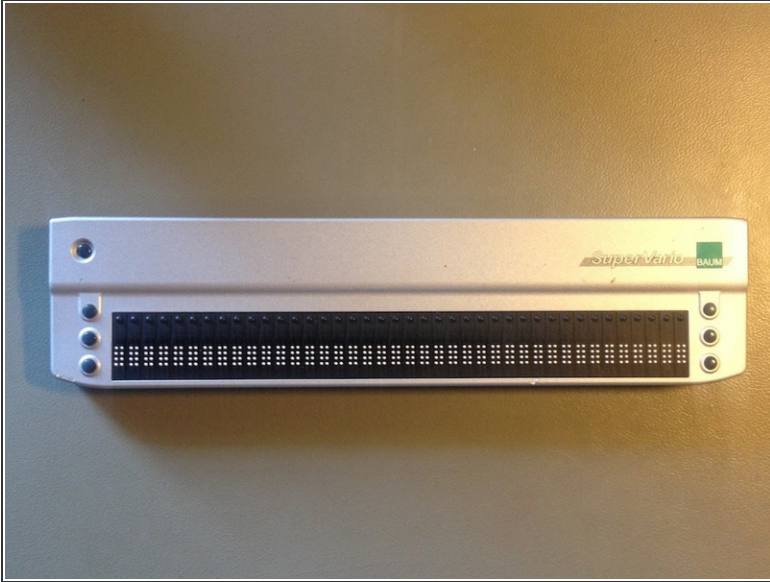


- Remove the four bottom screws with a Phillips #00 screwdriver.

Step 2

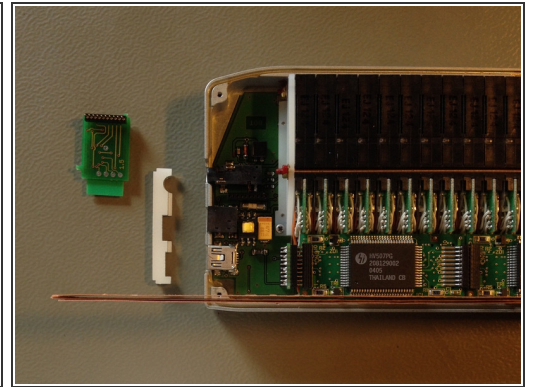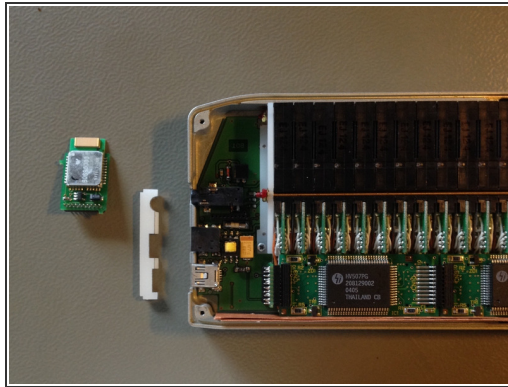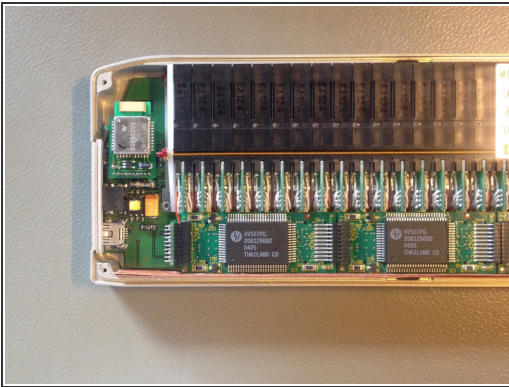


- Remove the plastic cover, paper and chipset.

Step 3

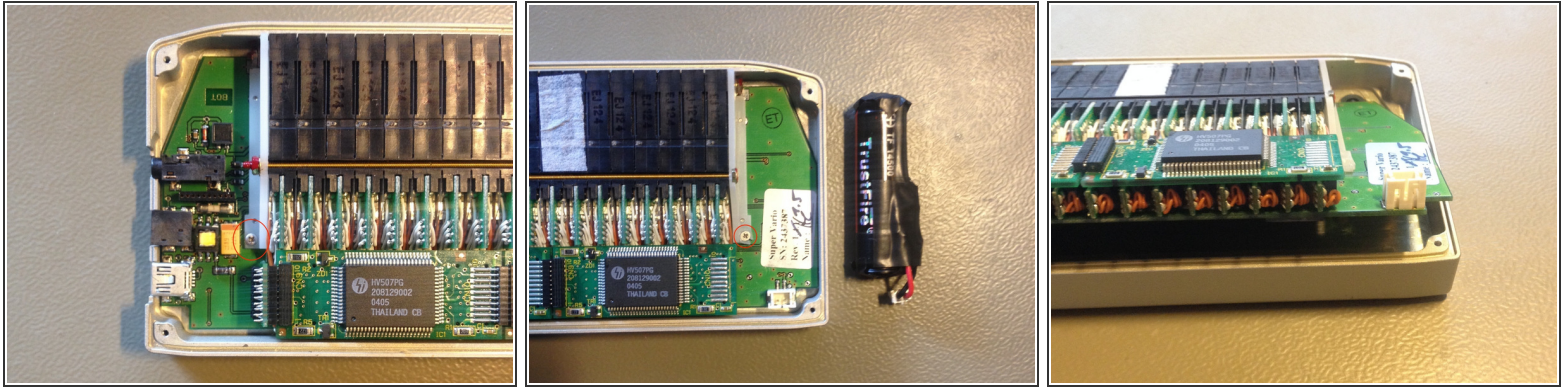


- Remove the two screws with a Phillips #00 screwdriver on the logic board.
- take out the main circuit like show in the picture

Step 4

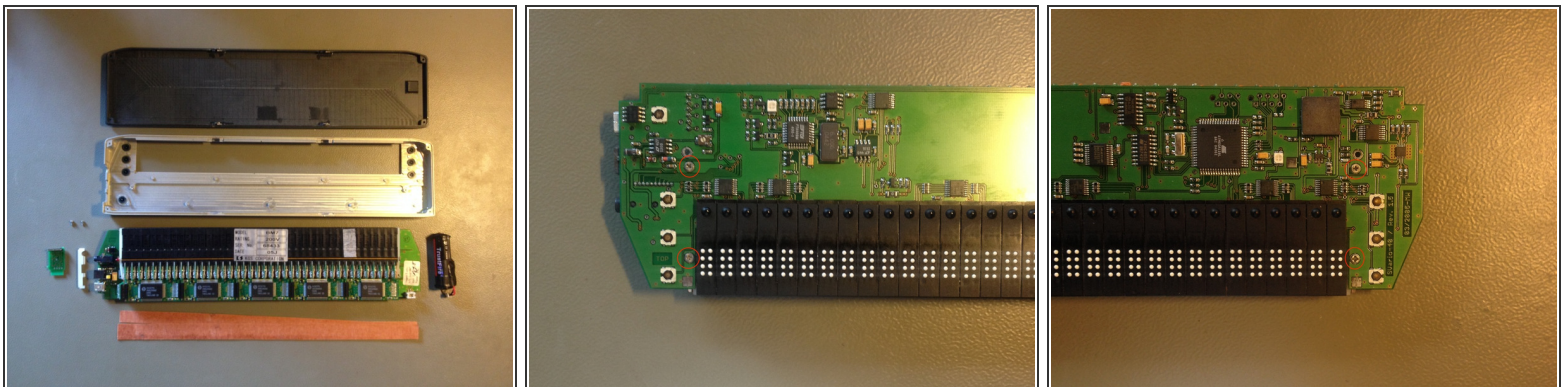


- Remove the four screws with a Phillips #00 screwdriver.

Step 5

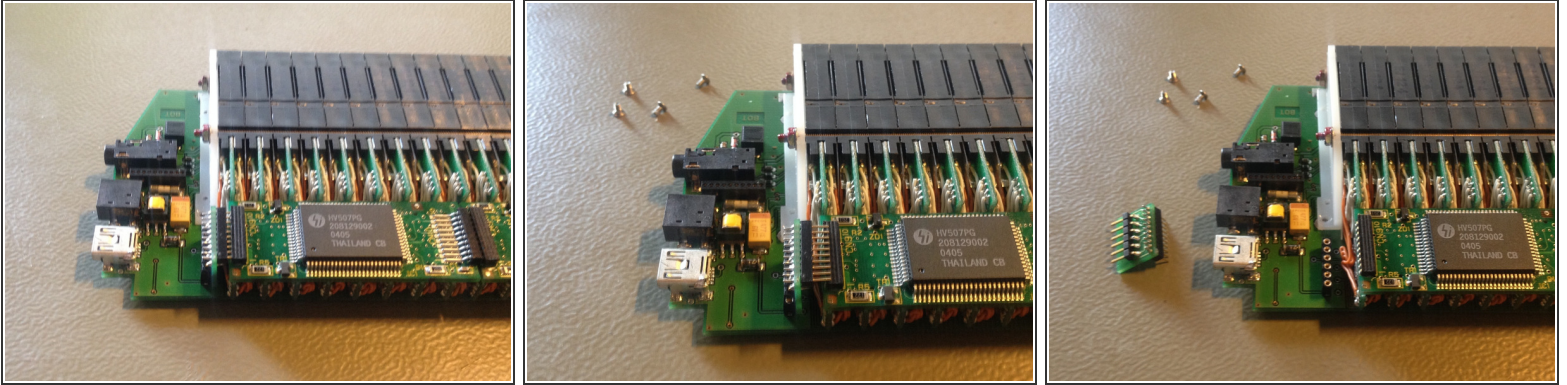

- Remove the connector delicately.

Step 6

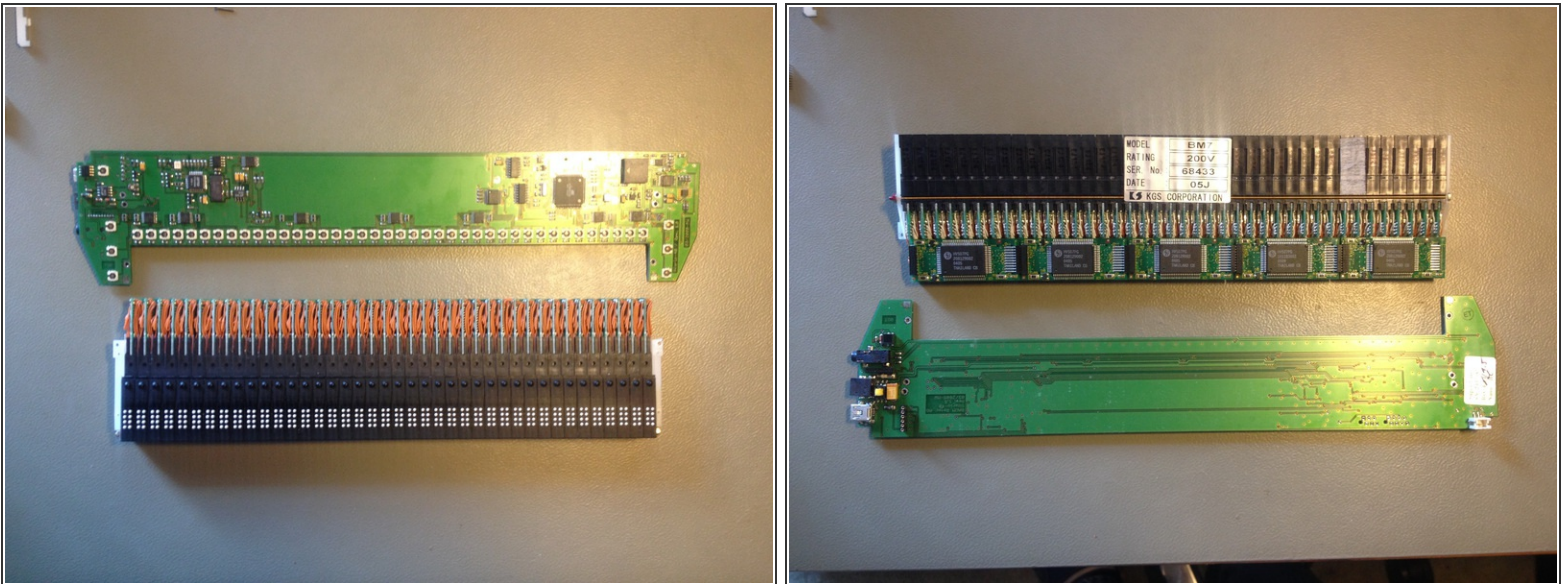

- when you put it back together make care mechanical cells are connected correctly

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-24 02:16:50 PM.