




Electrohome EAAC475 Speaker Replacement

This guide will show how to replace a faulty speaker in an electrohome EAAC475.

Written By: Ruolin Cai

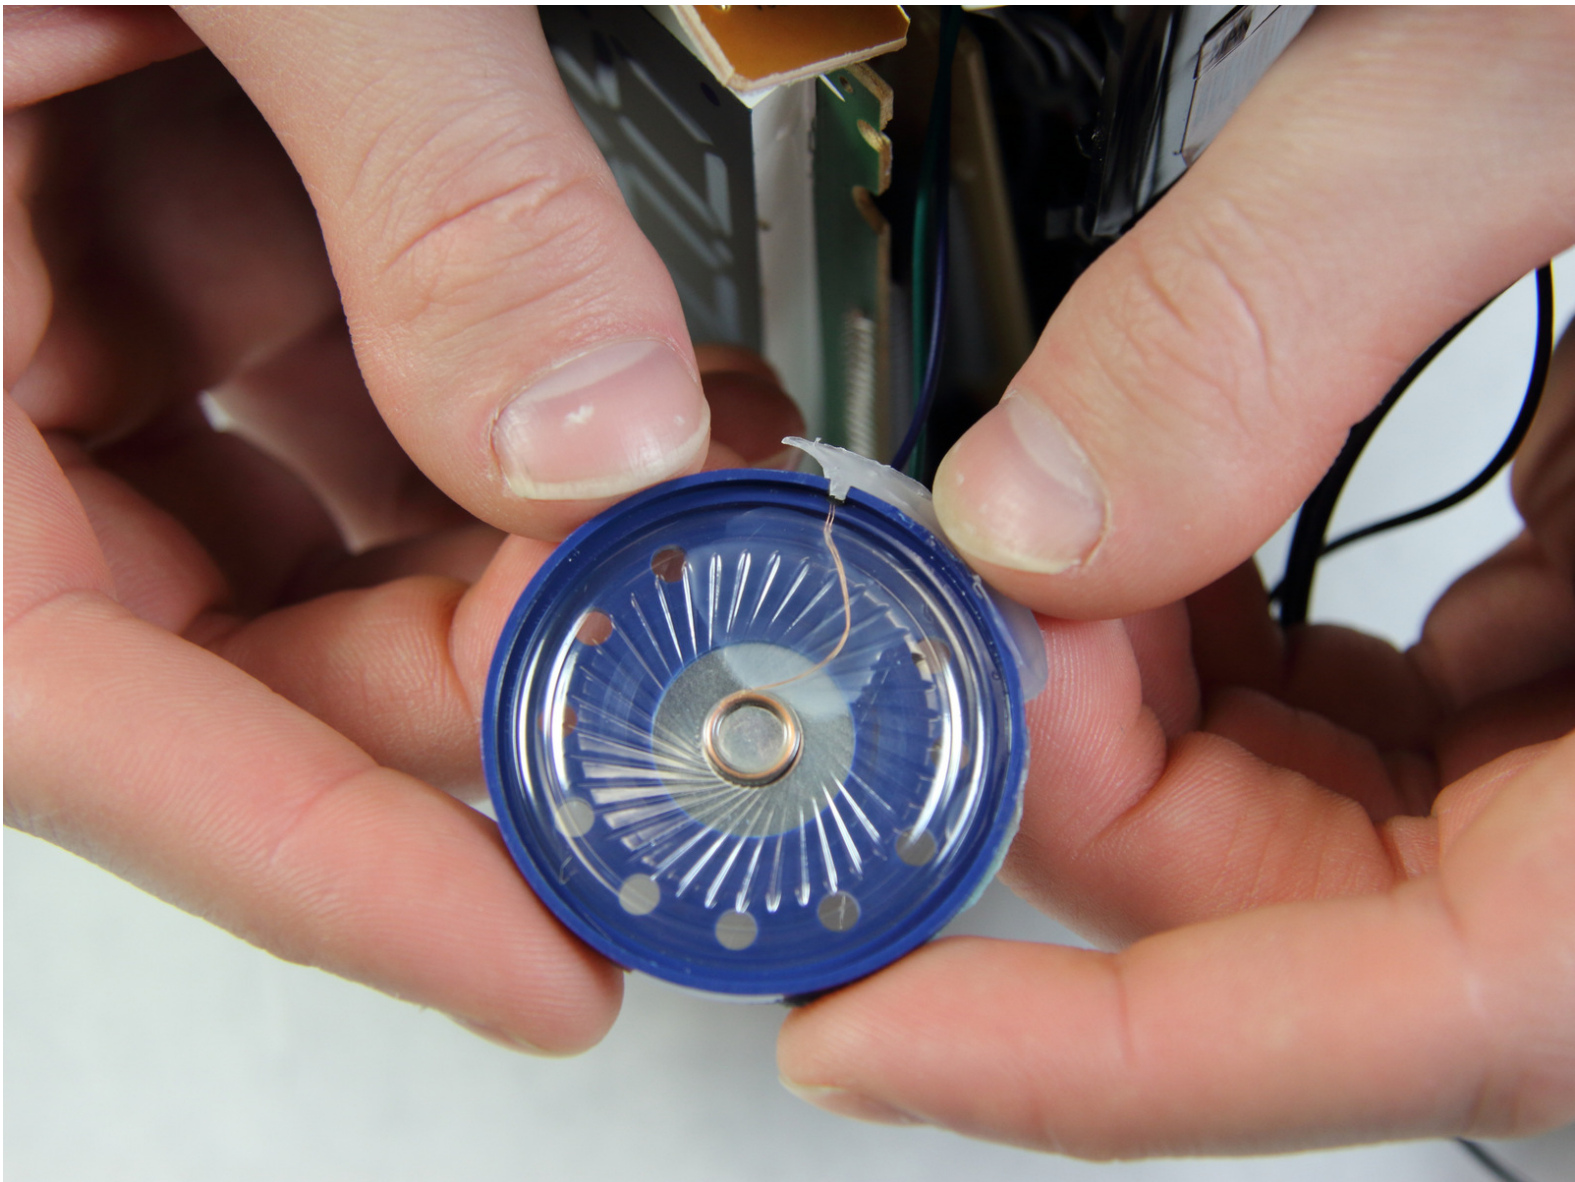

INTRODUCTION

Speaker is a key component for the radio and the alarm in your electrohome EAAC475. This guide will help you to learn how to replace it, should it fail to function.



TOOLS:


- [Heavy-Duty Spudger](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the 10 mm Phillips #1 screw from the battery cover.
- Remove the battery cover.

Step 2

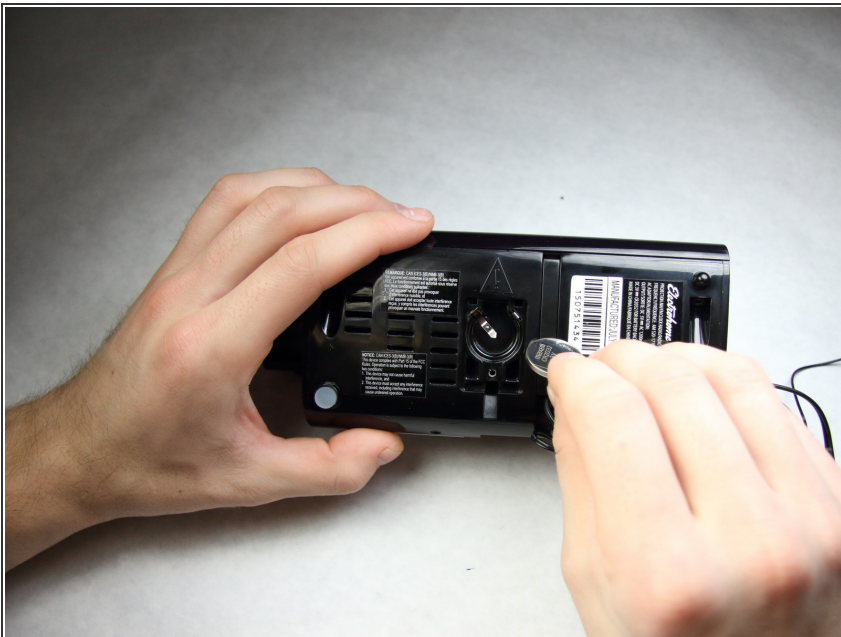

- Remove the flat lithium battery.


Step 3 — Buttons



 Disconnect the radio from all power sources.


- Remove the two 10 mm Phillips #1 screws from the bottom of the device.
- Remove two 10 mm Phillips #1 screws from the back side of the device.

Step 4

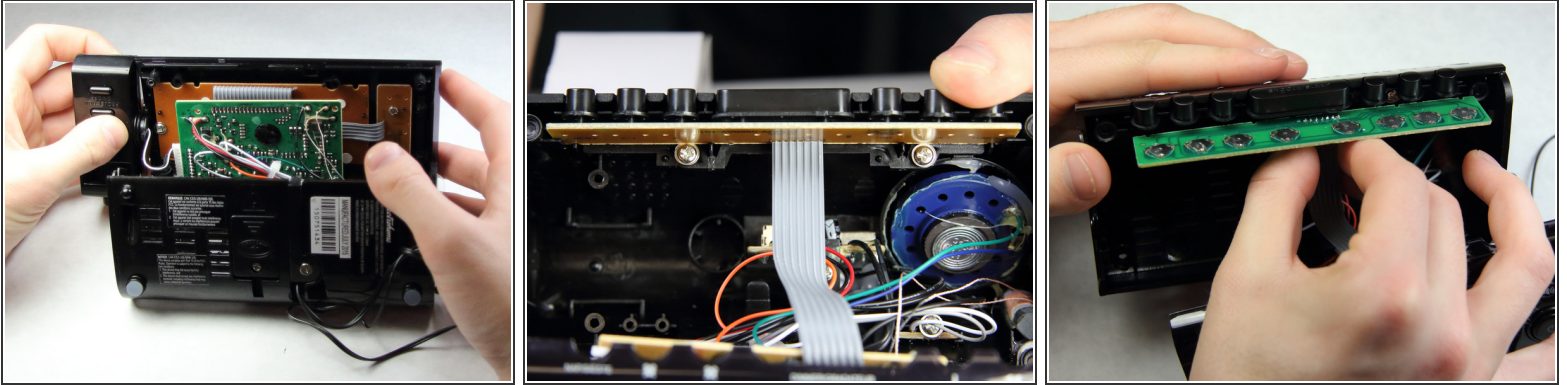



- Carefully and slowly pull the lower case away from the rest of the device.
- ⚠ Do not completely separate the lower case. There are several wires connecting the two halves of the device.
- Flip the device over to access the button assembly.
 - Slowly remove the button contact board from the assembly.

Step 5

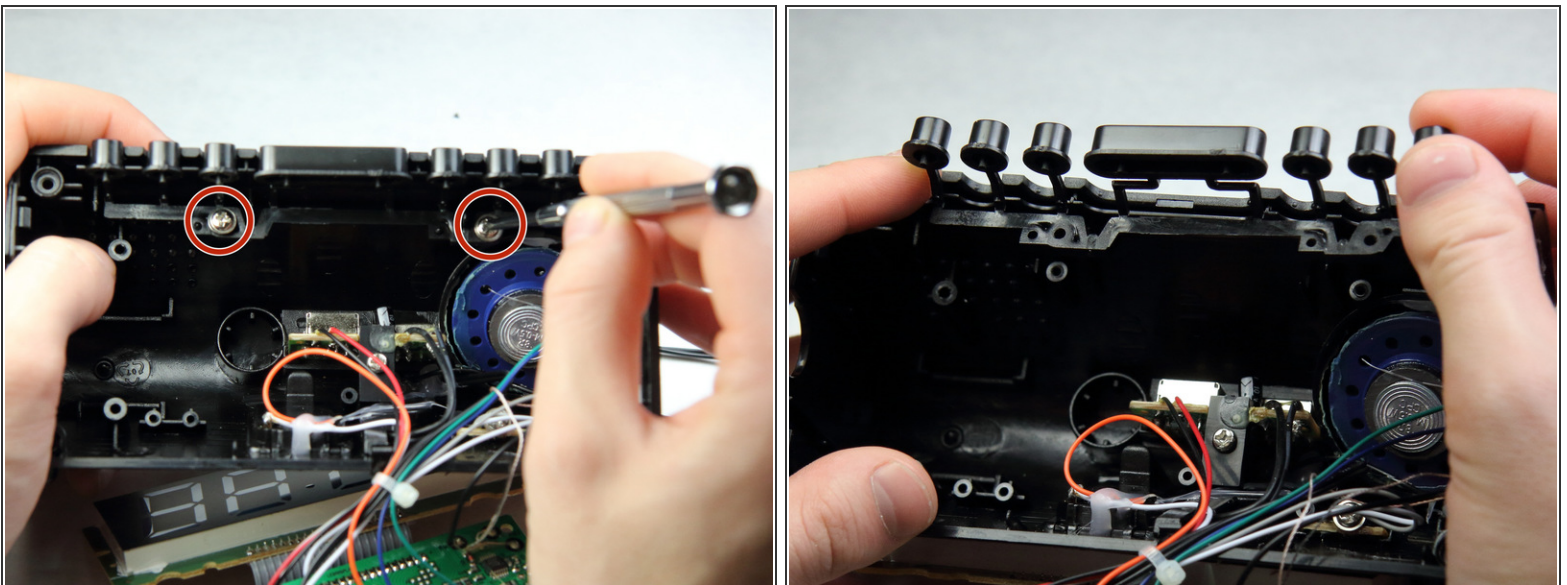

- Remove the two 7 mm Phillips # 1 screws holding the buttons.
- Remove the plastic buttons.

Step 6 — Speaker

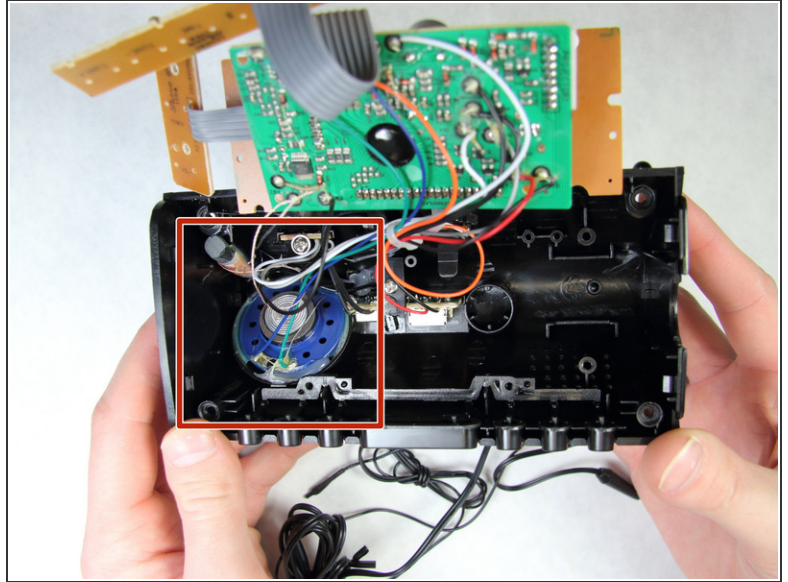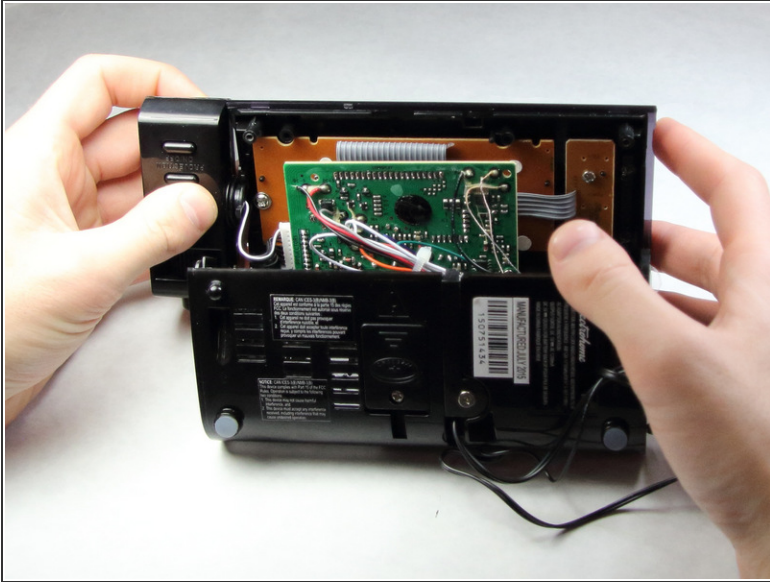


- Carefully and slowly detach one side from another.
- ⚠ Make sure the opposite sides are not separated completely.
- Locate the speaker the inside of the back piece of the device

Step 7




- Use the flat side of the spudger to remove the glue around the speaker.
- ⓘ This glue will need replacing when putting back the speaker.

Step 8

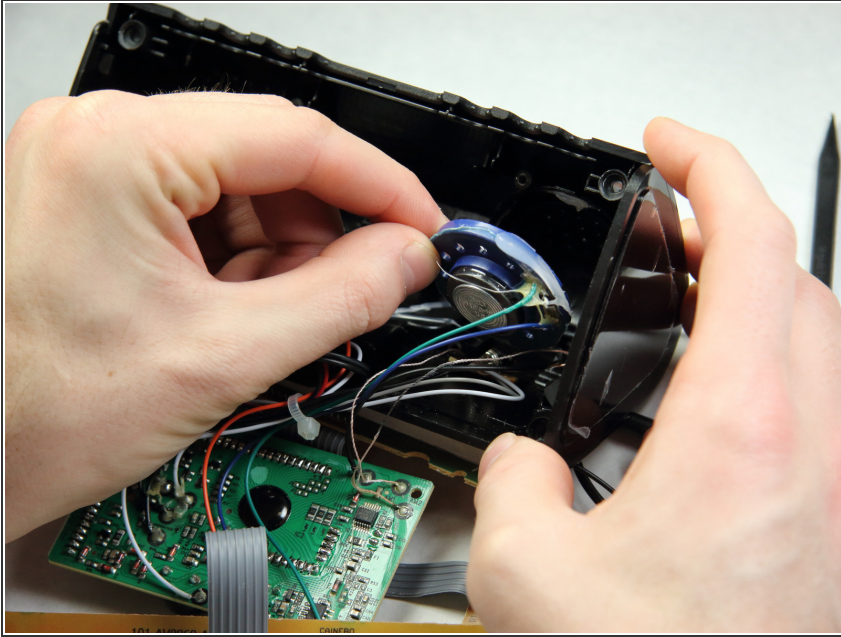

- After removing all the glue around the speaker, slowly take out the speaker.
- ⚠ Be careful not to break anything surrounding the speaker while using the spudger since it is sharp.

Step 9

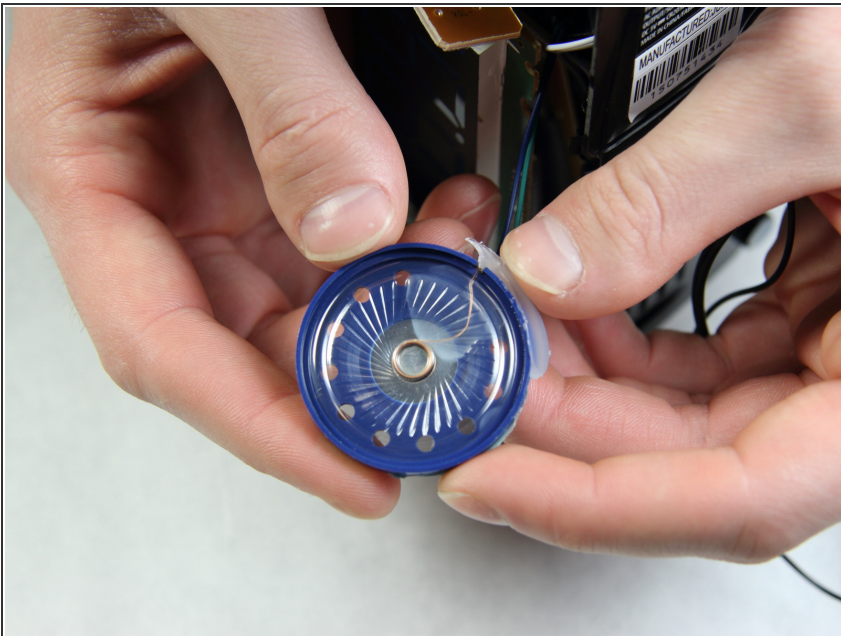

- Detach the wires on the speaker and replace them with new ones.

To reassemble your device, follow these instructions in reverse order.