



# Infant Optics DXR-8 Back Cover Prerequisite

How to remove the cover from the monitor in order to replace internal devices such as charging port, antenna, or screen.


Written By: Peyton Ulrich



## INTRODUCTION

Disassembling the monitor allows for replacement of various internal components such as the charging port, screen, speaker, or antenna.

## Step 1 — Internal Monitor Components

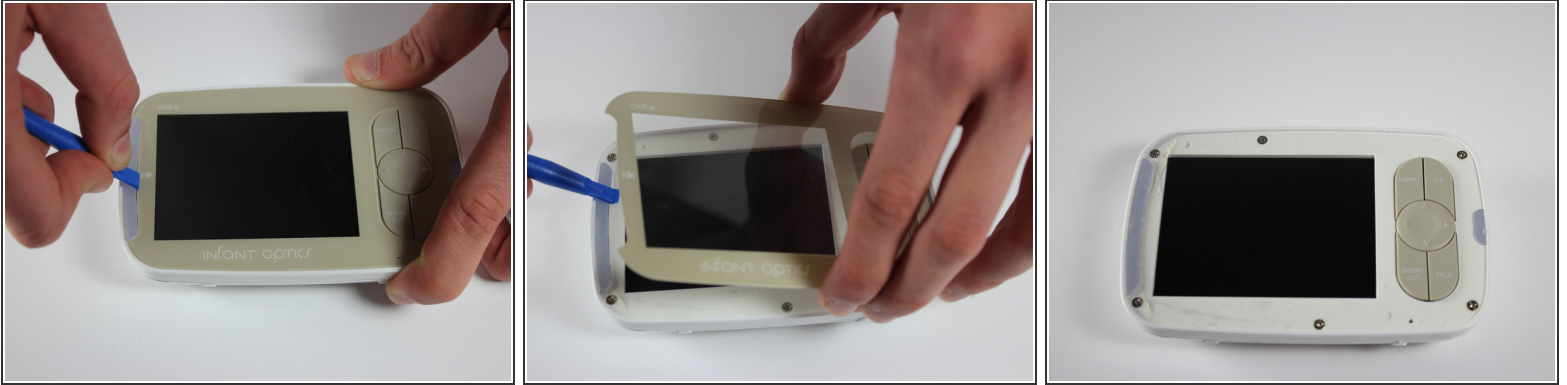

- Using the plastic opening tool, remove screen protector from front of monitor.

## Step 2



- Remove the six 4mm screws using a size 00 Philips head screwdriver.
- Remove the screen, exposing the circuit board.
- Turn device over to expose rear circuit board.

## Step 3



- Disconnect speaker from monitor for ease of access by unplugging wire.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-25 03:07:16 PM.