




# Jabra Speak 510 Speaker Replacement

Follow this guide to remove the speaker from the Jabra Speak 510 for replacement. Do this if the device is having sound issues and you have visited the troubleshooting guide.

Written By: Jordan Murphy

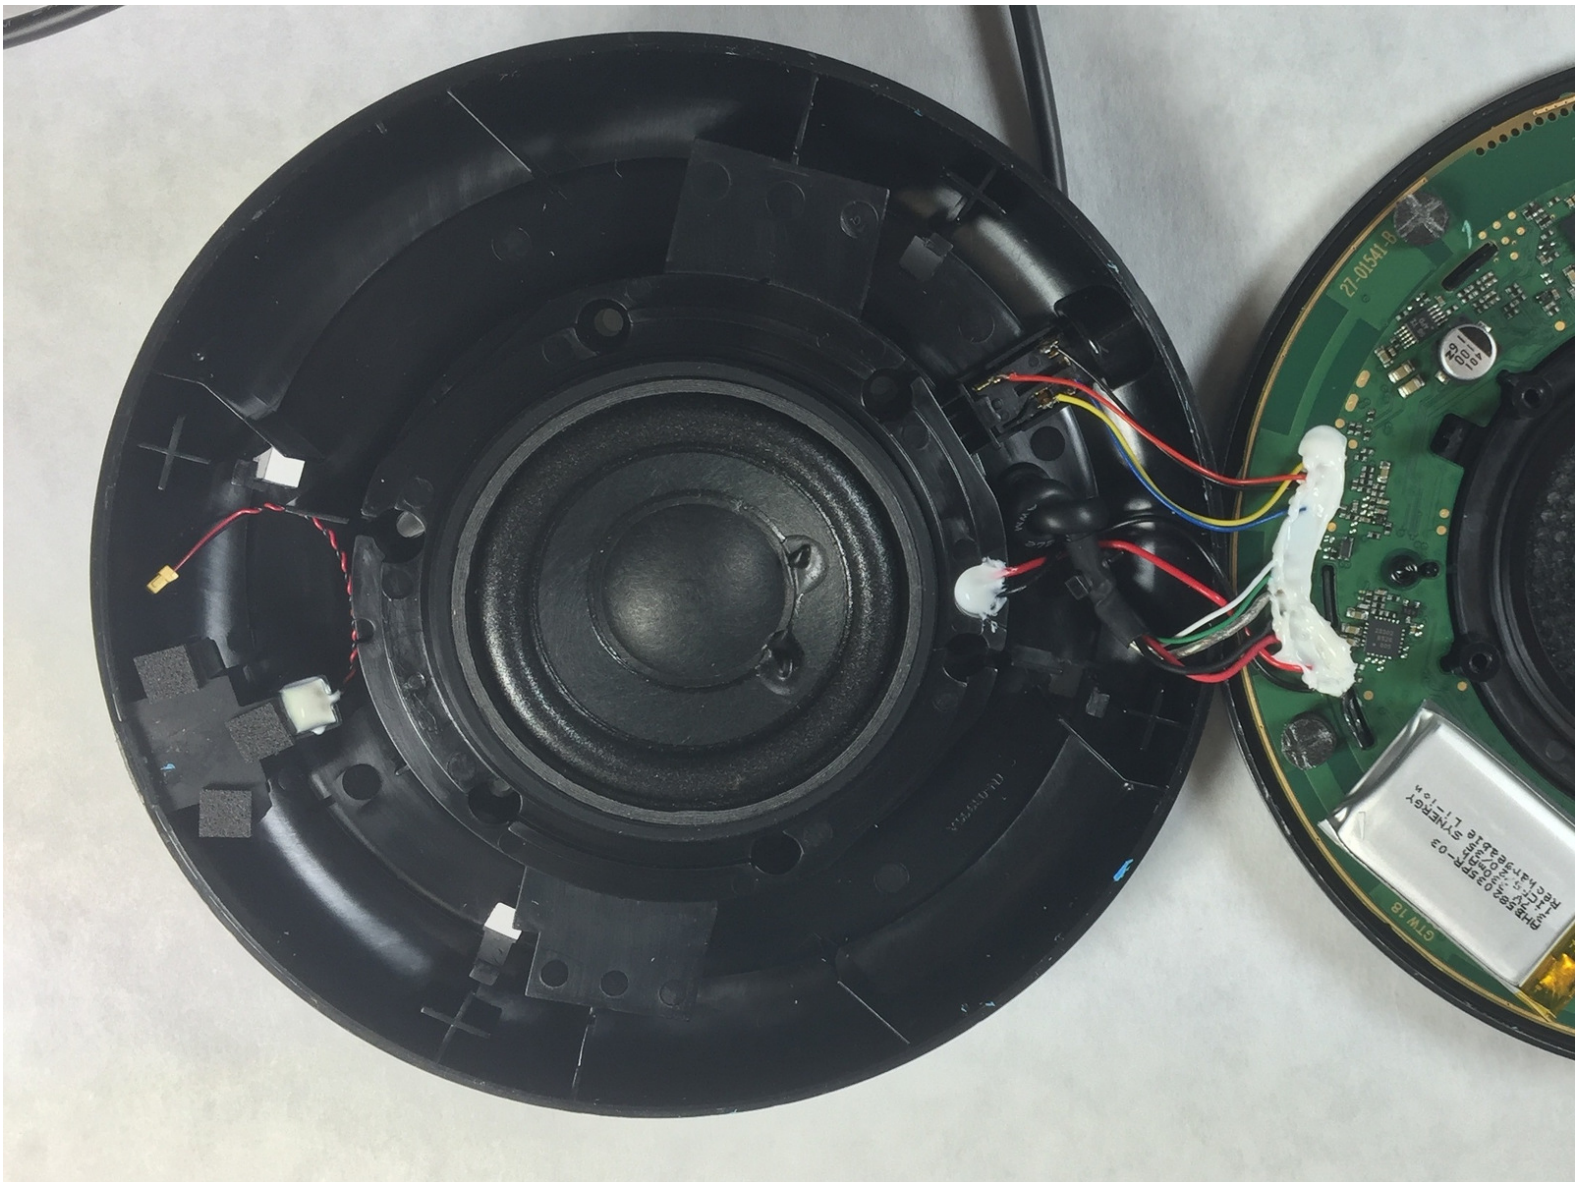

## INTRODUCTION

If the speaker is distorted or not functioning, you may need to replace it. This guide will give you step-by-step instructions on how to replace the speaker in the Jabra Speak 510.


---



### TOOLS:


- [Metal Spudger Set](#) (1)
  - [T6 Torx Screwdriver](#) (1)
  - [Soldering Station](#) (1)
-

## Step 1 — Outer Casing

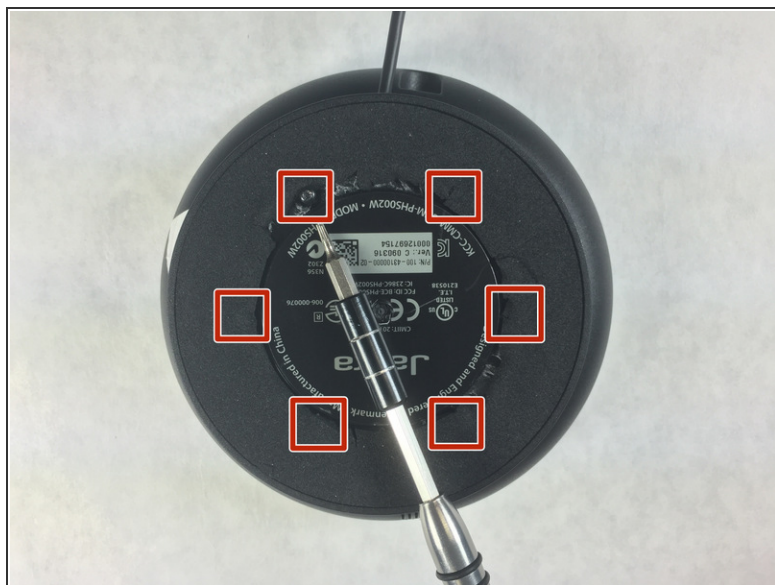

- Using a metal spudger, peel back the foam pad on the bottom of the device to reveal six screws.

## Step 2

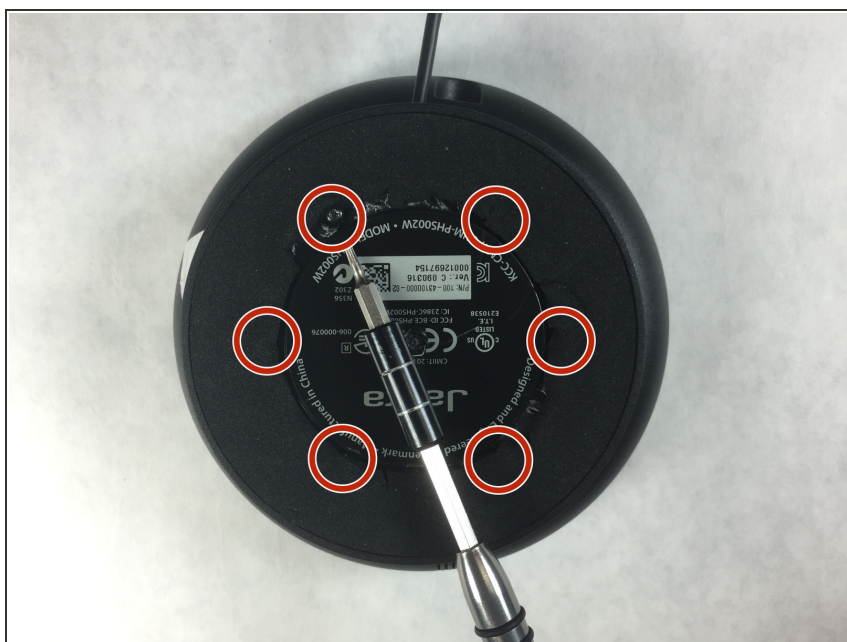

- Remove the six 20 mm T6 screws from the bottom of the device.




### Step 3



- Remove the back plate and the grey foam underneath.

### Step 4

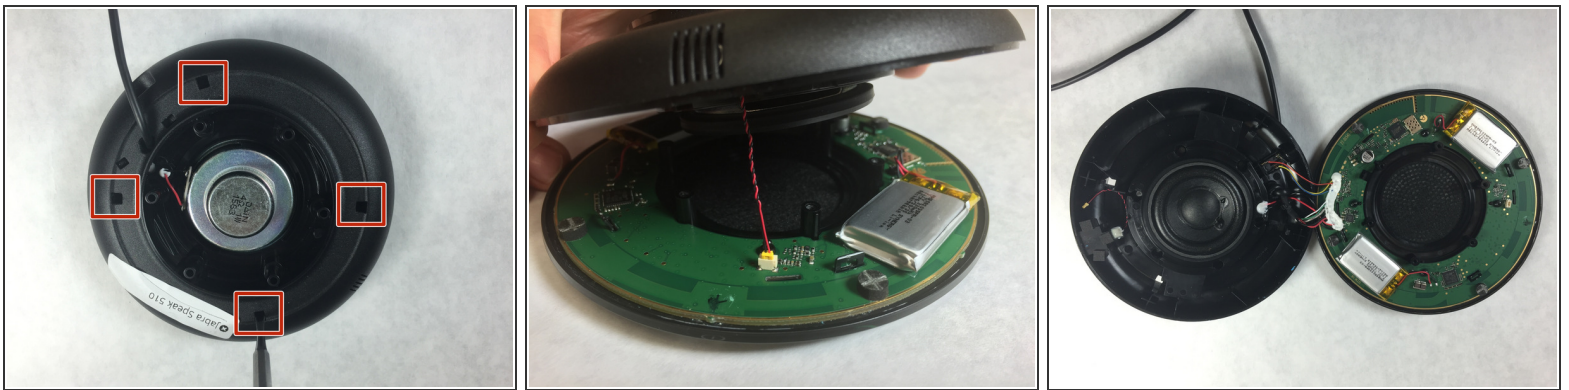

- Use a small, pointed metal spudger to release the plastic tabs connecting the faceplate to the bottom of the speaker.
- ⚠ A small cable connects the faceplate to the device. Carefully disconnect the cable before fully opening the device.
- Slowly flip the device open like a clam shell.
- ⓘ There are several wires soldered to the motherboard that prevent the faceplate from detaching completely.

## Step 5 — Speaker



- Desolder the two wires running to the speaker.
  - ⓘ You can find soldering tips in the [How To Solder and Desolder Connections](#) guide.
- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-11-13 06:07:24 AM.