



Montgomery Ward GEN-39500 Back Cover Replacement

Prerequisite Only

Written By: Dustin Platt




Step 1 — Back Cover





- Remove the nine 35 mm Phillips screws securing the back cover of the case.

Step 2

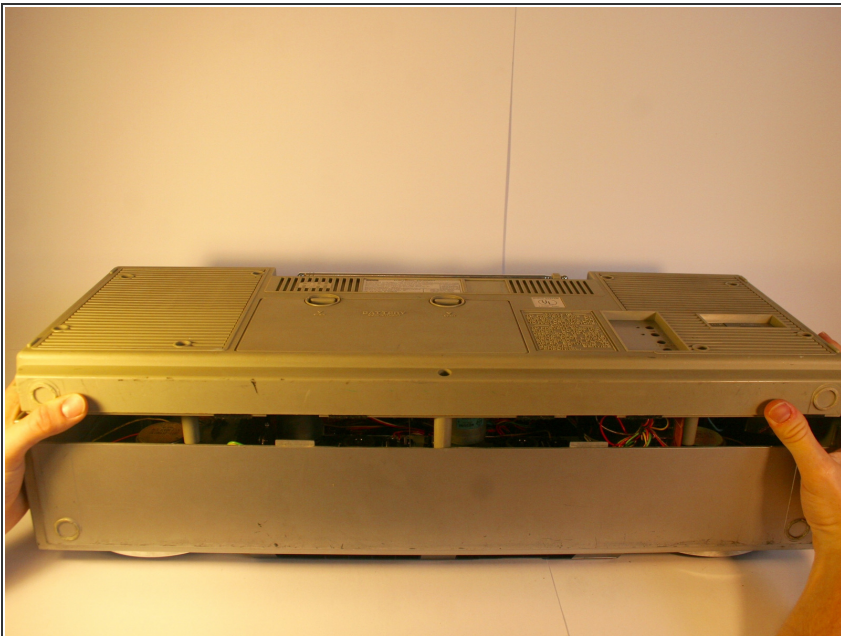

- Carefully remove the back cover.
- ⓘ Soldered wires connect electronics on the back cover to the internal electronics. Be careful not to break any connections.

Step 3

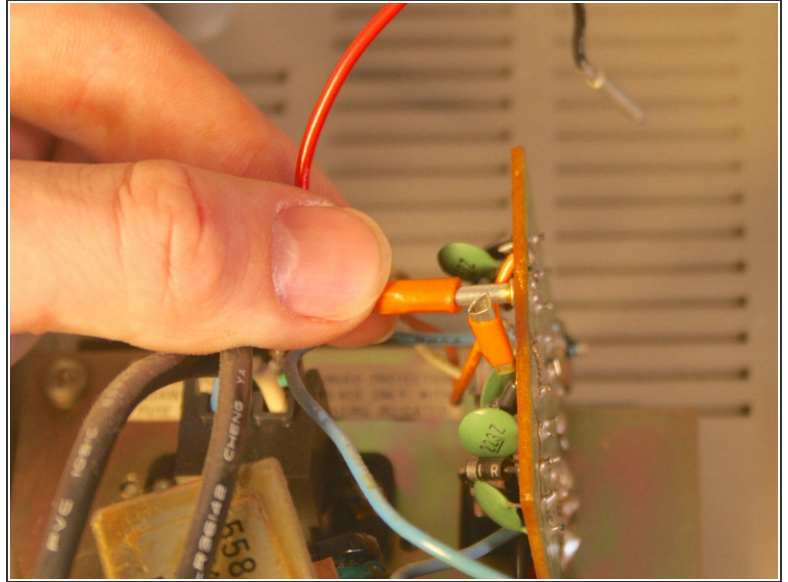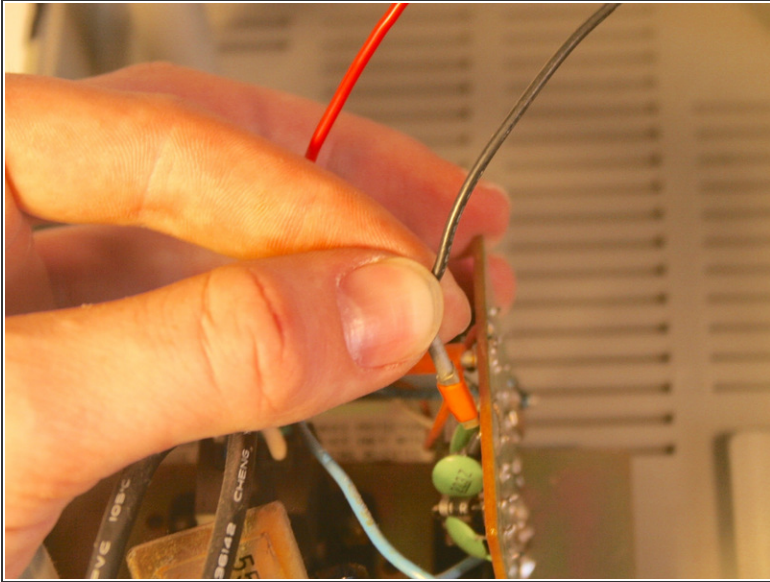

- Unplug the black and yellow wires connecting the power supply unit to the rest of the electronics:
- ⓘ This is not necessarily required. This step is to allow the back cover more movement as you work on the inside of the unit.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-14 01:48:27 PM.