




Oregon Scientific Meep! 4.0 Battery Replacement

Follow this guide to replace the battery of your Oregon Scientific Meep! 4.0 tablet.

Written By: Jess Forte

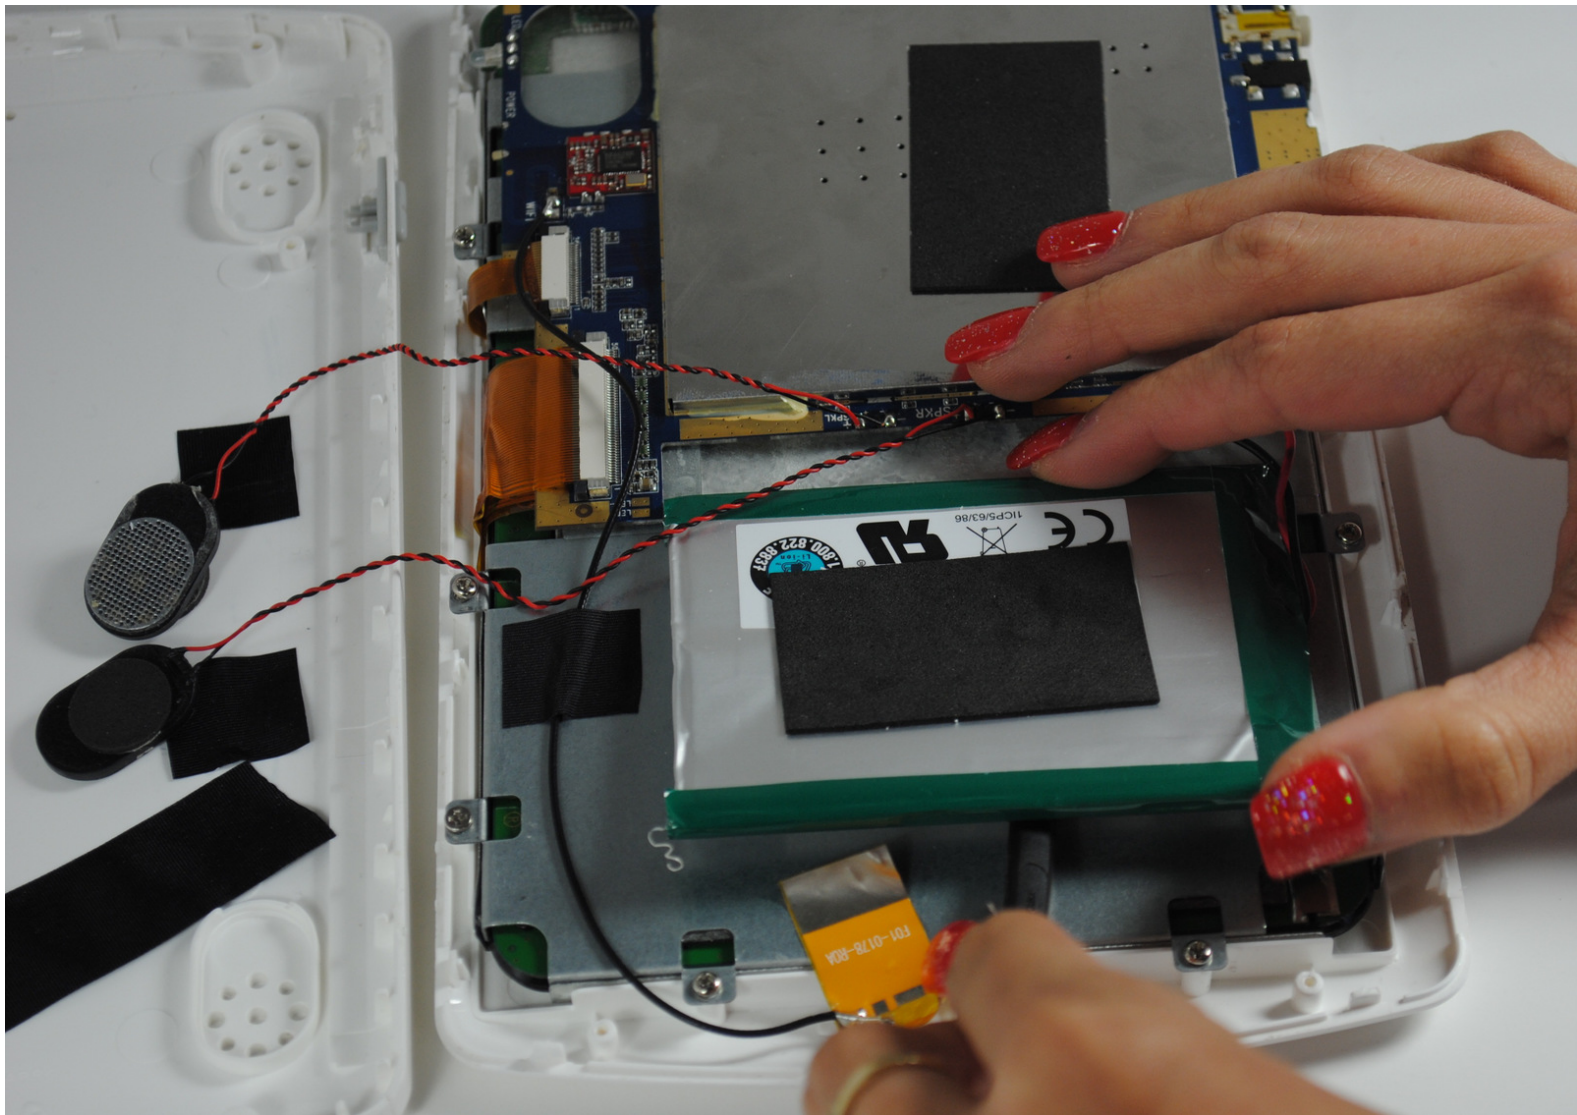

INTRODUCTION


Using this guide, you will be able to open your Oregon Scientific Meep! and remove your faulty battery, which can be replaced with a new one.



TOOLS:

- [Screwdriver](#) (1)
 - [Soldering Station](#) (1)
 - [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Oregon Scientific Meep! 4.0 Disassembly

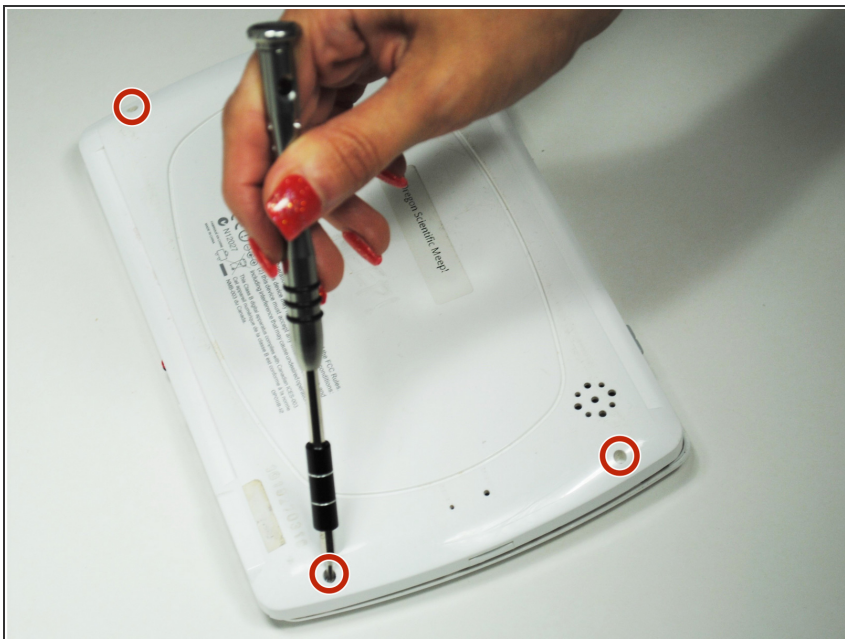


- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.

Step 2




- Use a plastic opening tool to detach the clips on the inside of the device.

Step 3 — Battery

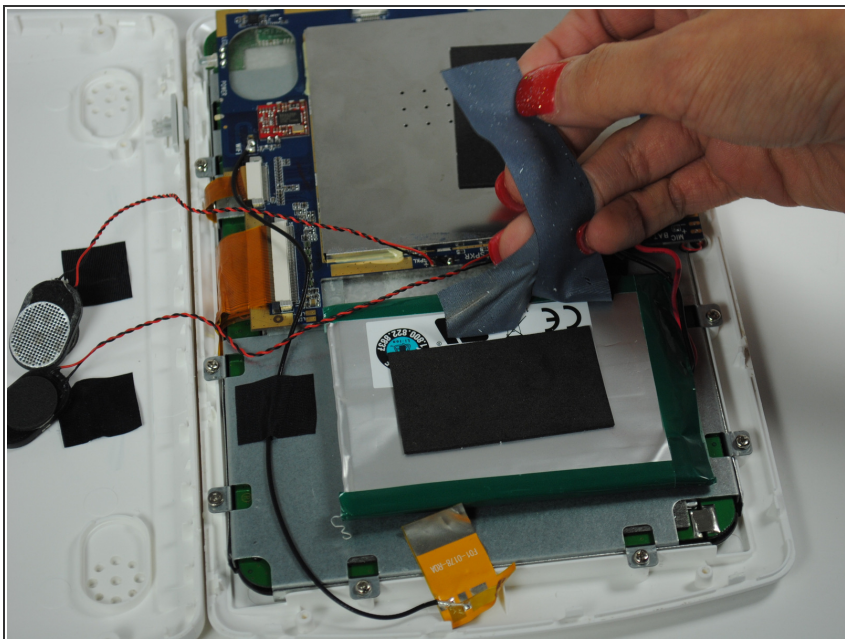


- Remove the black tape holding the battery in place.

Step 4

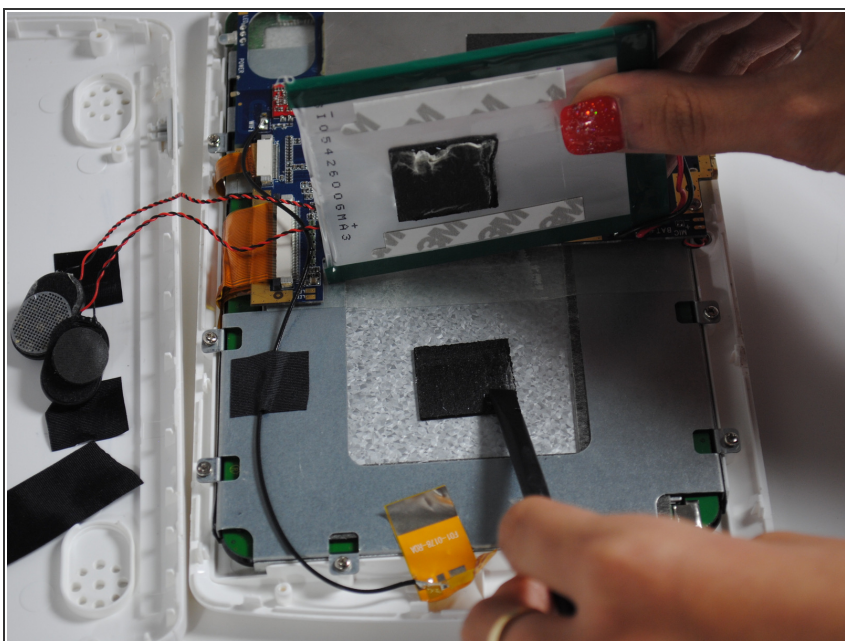

- Use a spudger to separate the battery from its adhesive.

Step 5

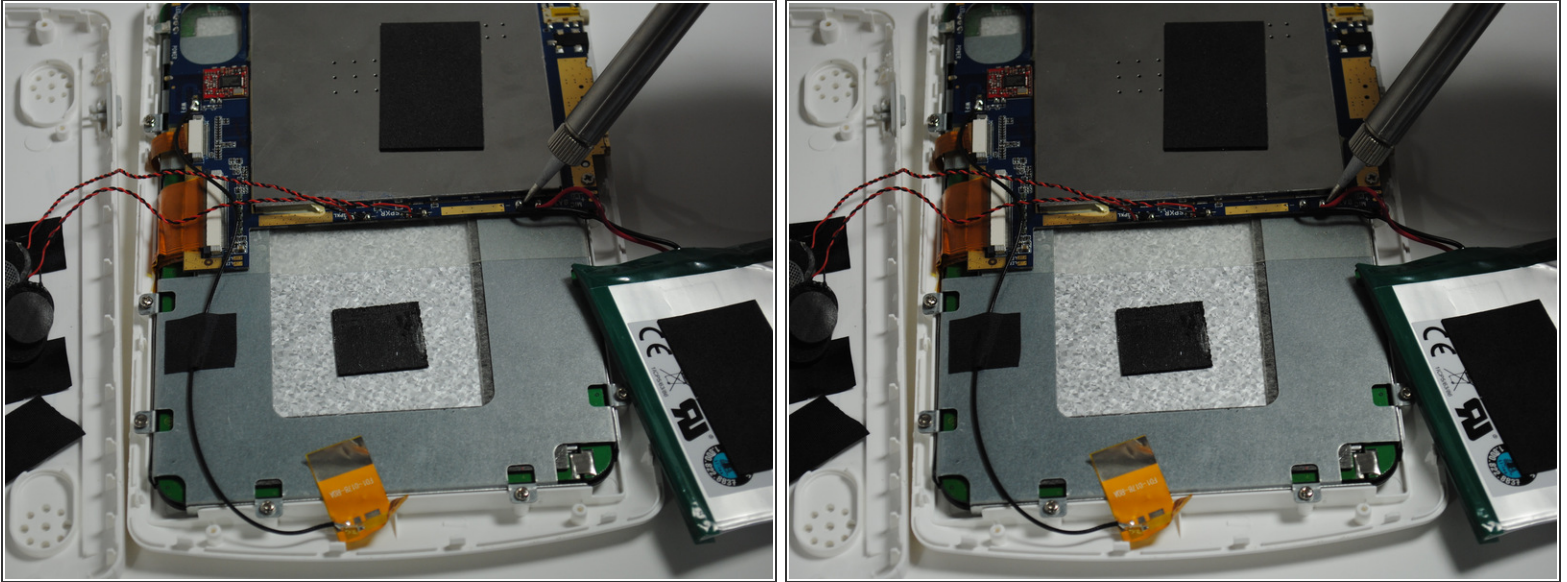

- Use a soldering station to separate the battery from its connecting wires.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:18:11 PM.