



Oregon Scientific Meep! 4.0 Screen Replacement

Follow this guide to replace the screen of your Oregon Scientific Meep! 4.0 tablet.

Written By: Lauren Milici



INTRODUCTION


Follow the steps in this guide to successfully replace the damaged screen of your Oregon Scientific Meep! 4.0.



TOOLS:

- [Soldering Station](#) (1)
 - [Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Oregon Scientific Meep! 4.0 Disassembly

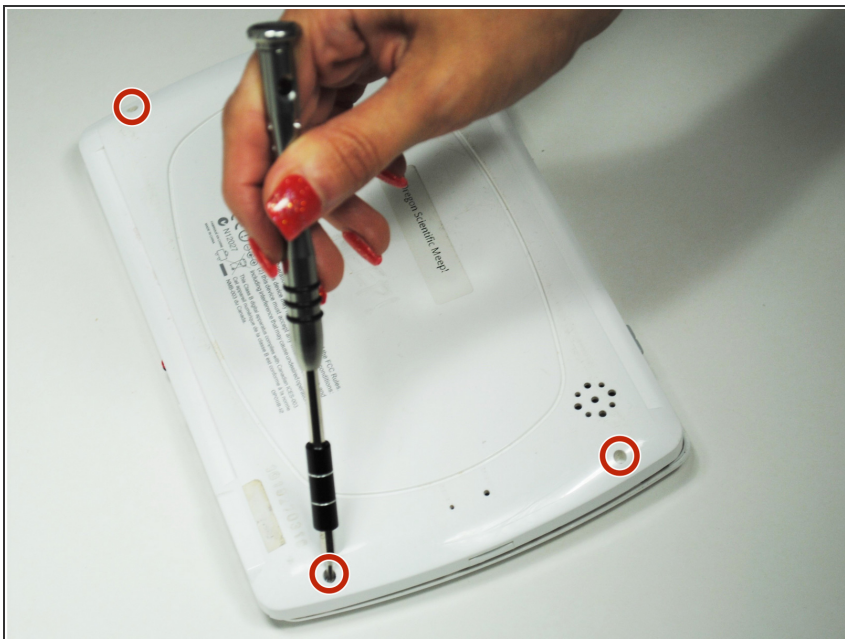


- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.

Step 2




- Use a plastic opening tool to detach the clips on the inside of the device.

Step 3 — Screen

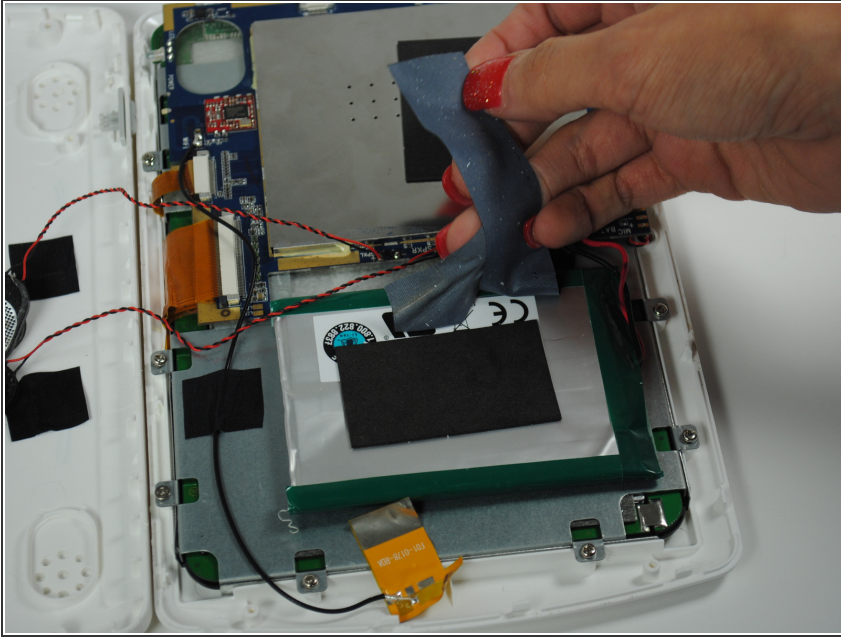


- Remove the black tape holding the battery in place.

Step 4

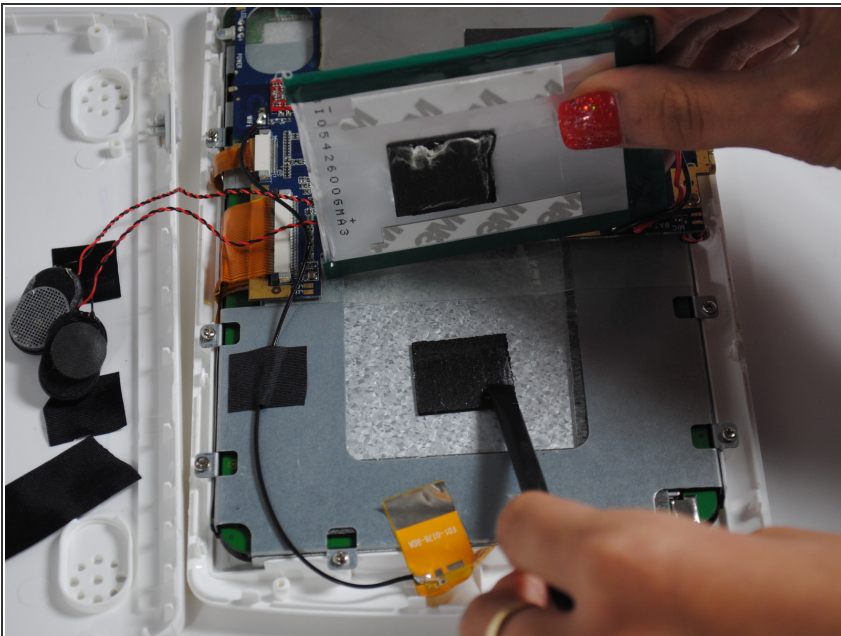


- Use a spudger to separate the battery from its adhesive.

Step 5

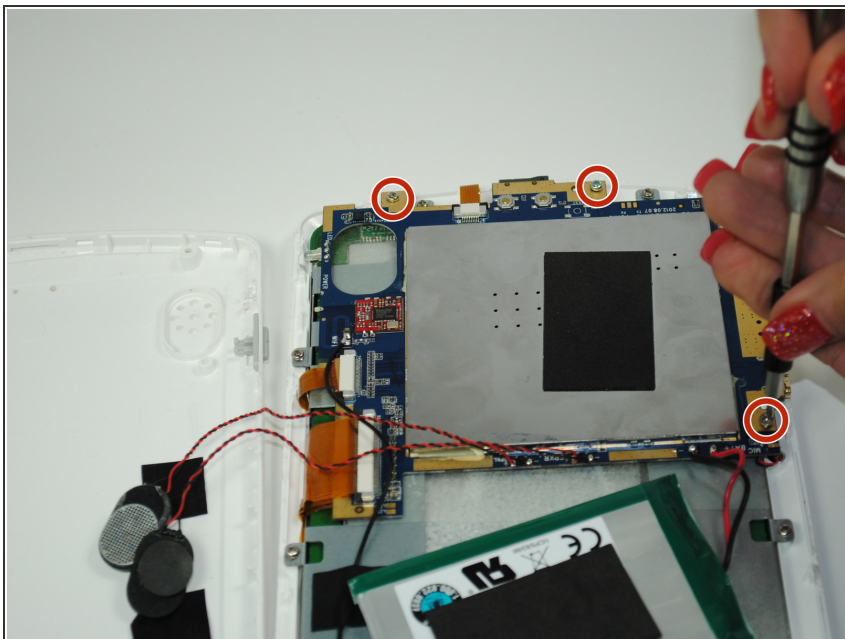


- Use a screwdriver to unscrew the three 4.0 mm Philips #00 screws holding the motherboard in place.

Step 6

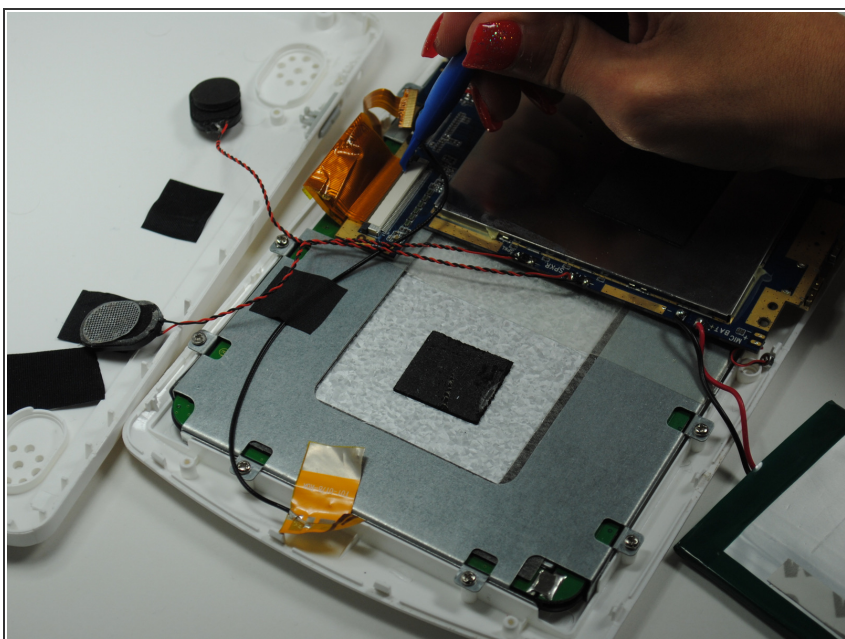


- Use a plastic opening tool and place the tip in between the white and black pieces holding in the ribbon cable in to release the three ribbon cables around the motherboard.

Step 7

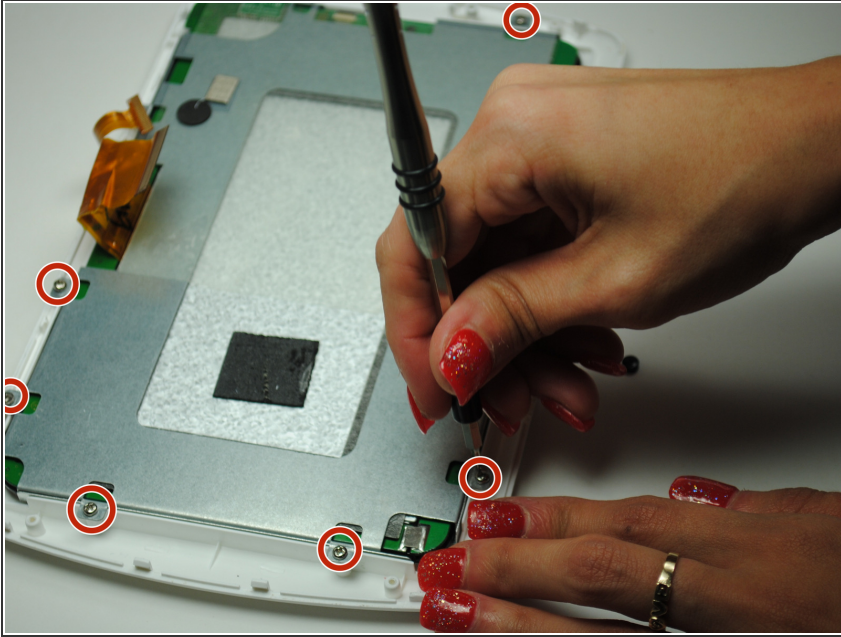

- Remove the motherboard and unscrew the twelve 7.0 Phillips #00 screws holding the metal casing around the screen in.

Step 8

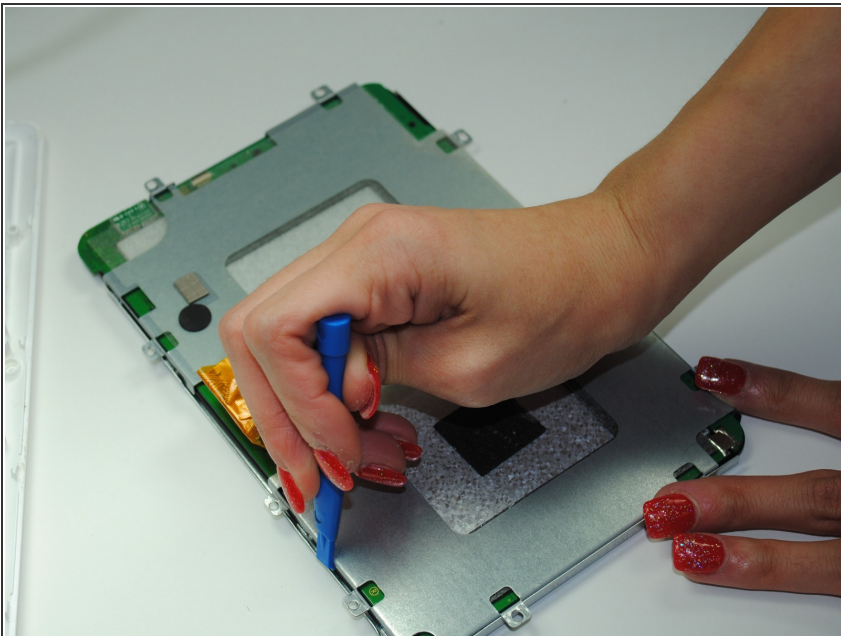

- Use a plastic opening tool to undo the metal clips holding the screen in place.

Step 9



- Remove the plastic over the screen and use a spudger or plastic opening tool to remove the screen from the sticky adhesive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-11 07:17:04 AM.