




# Oregon Scientific Meep! 4.0 Speakers Replacement

Follow this guide to replace the speakers of your Oregon Scientific Meep! 4.0.


Written By: Jess Forte

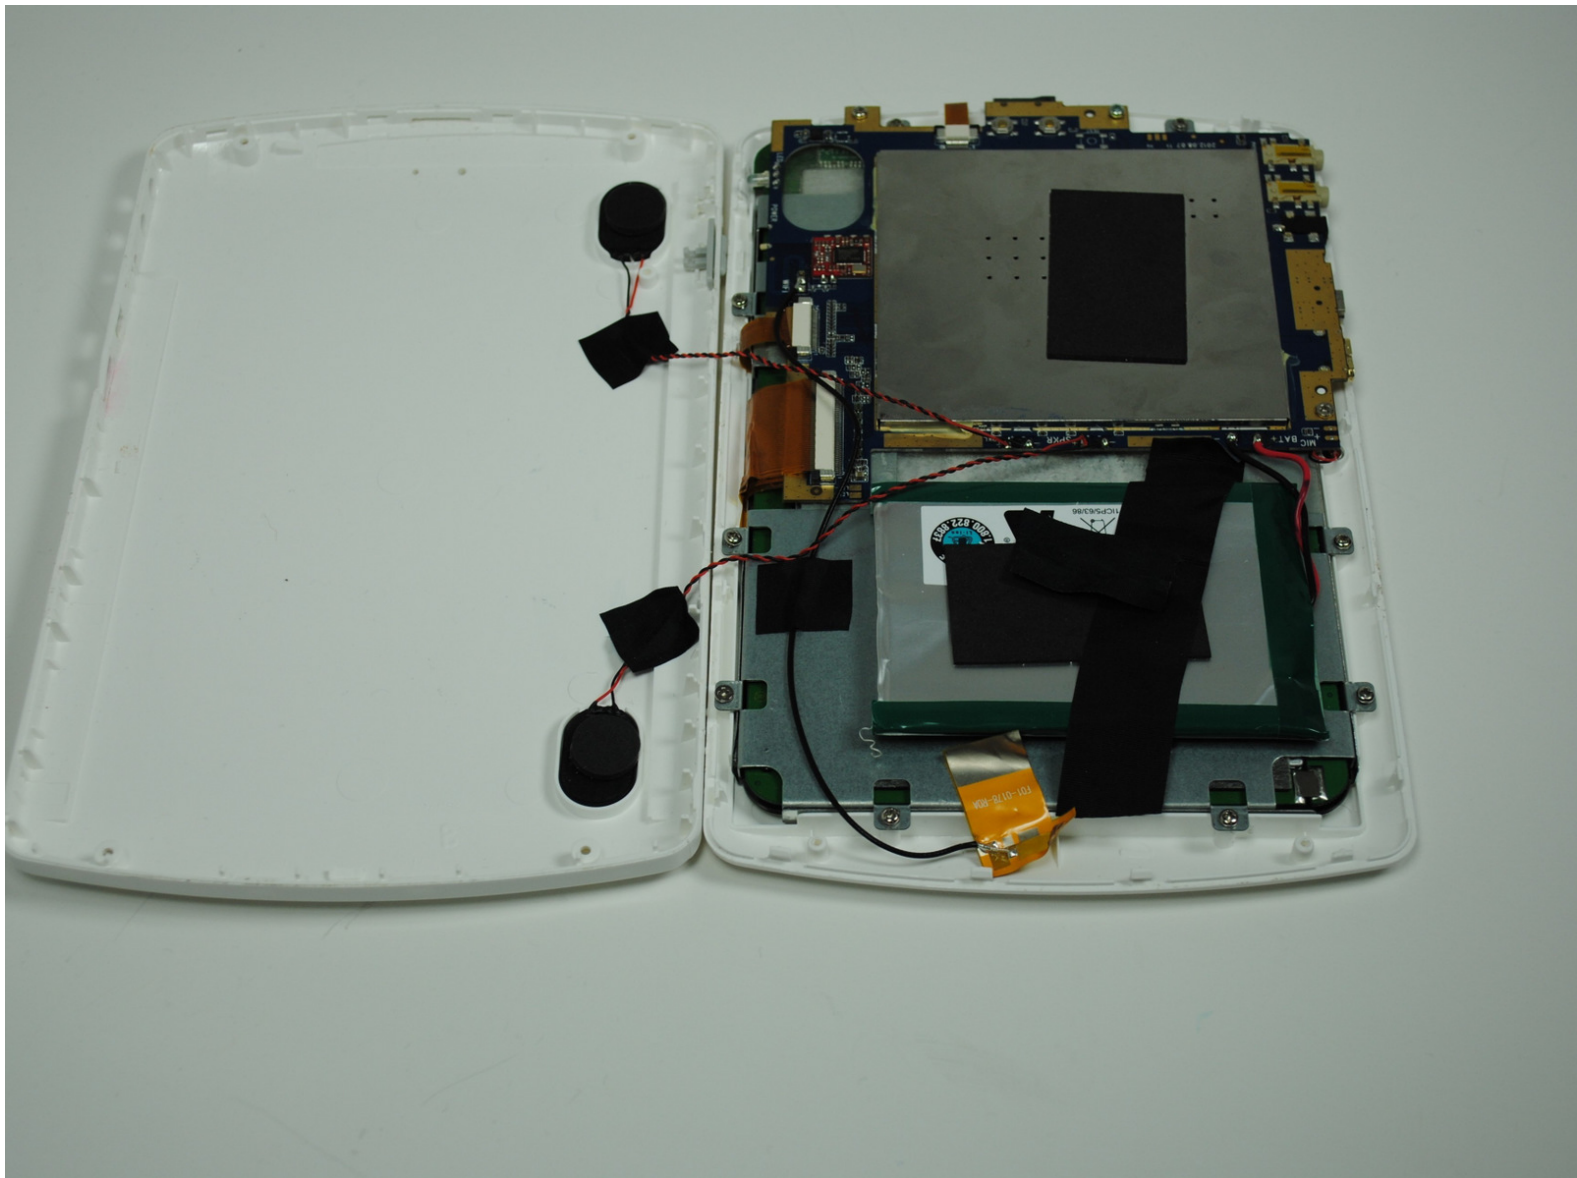

## INTRODUCTION

By following the steps below, you will be able to remove and replace the speakers of your Oregon Scientific Meep! 4.0.

## Step 1 — Oregon Scientific Meep! 4.0 Disassembly

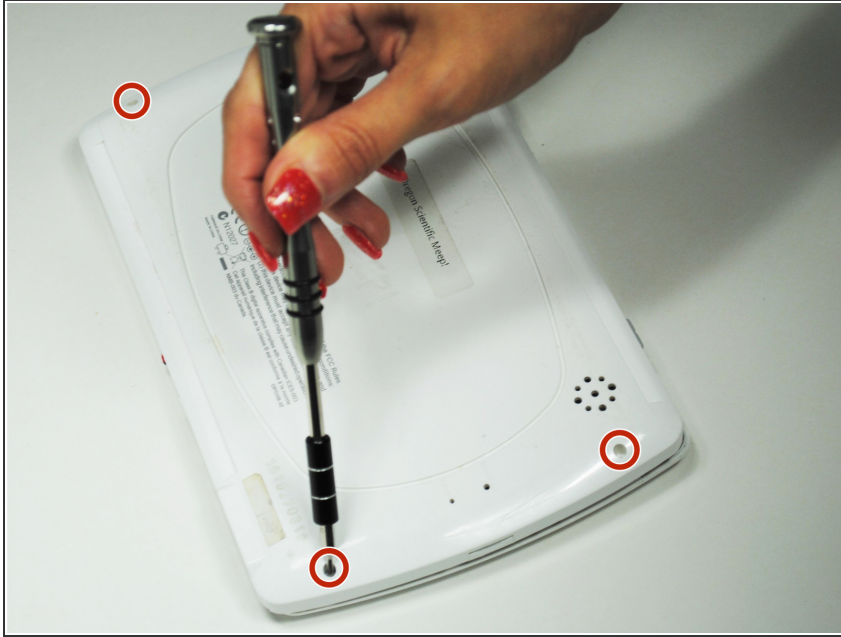

- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.



## Step 2



- Use a plastic opening tool to detach the clips on the inside of the device.





## Step 3 — Speakers

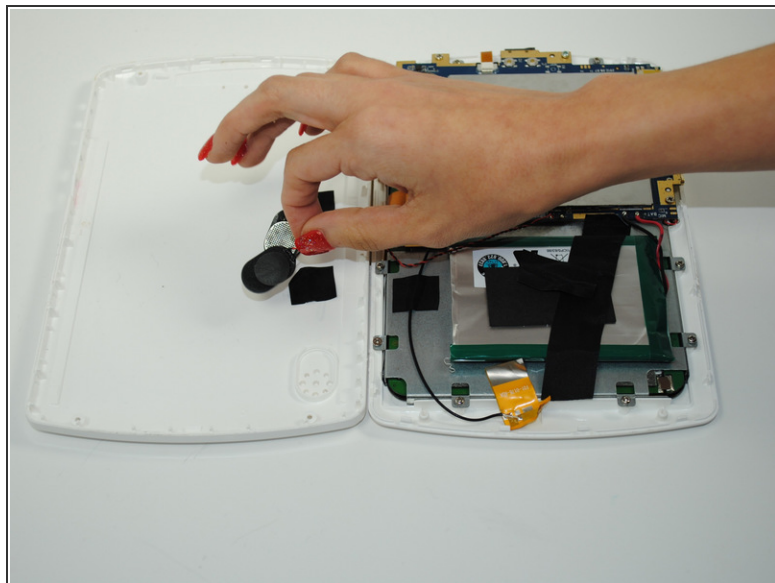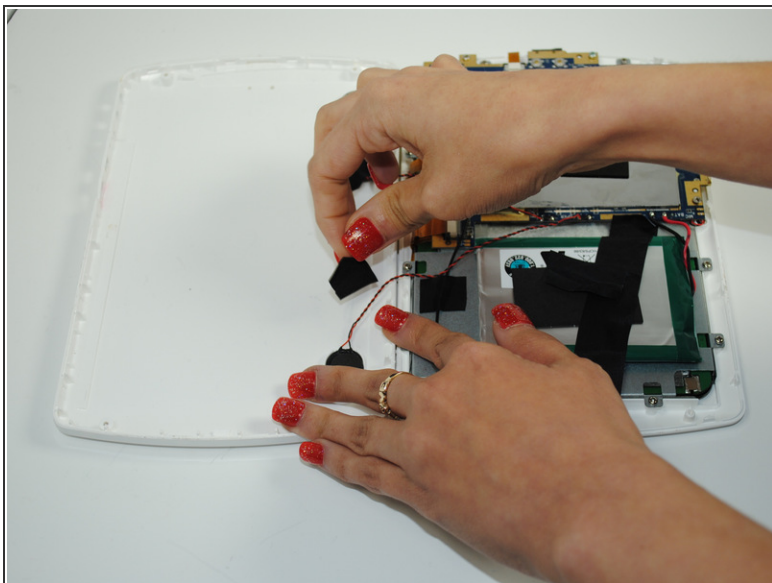

- Remove the electric tape holding the wires of the speakers in place and gently pull the speakers out of their slots in the device.

## Step 4

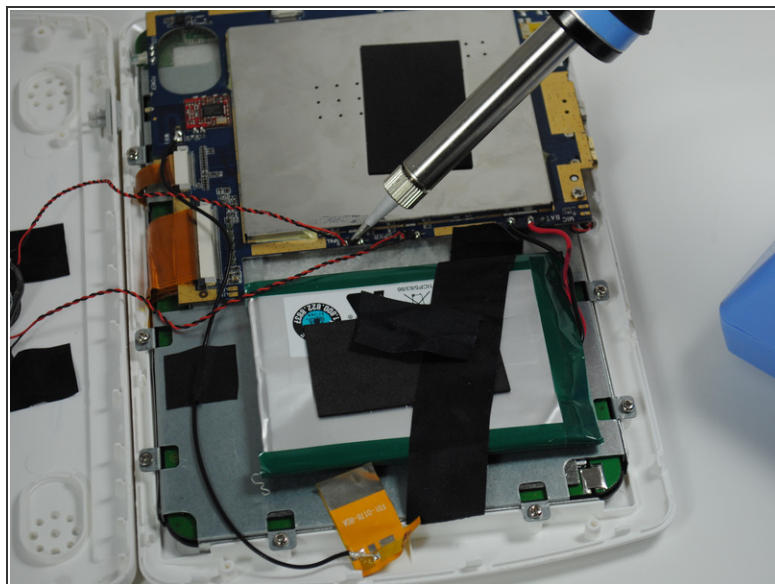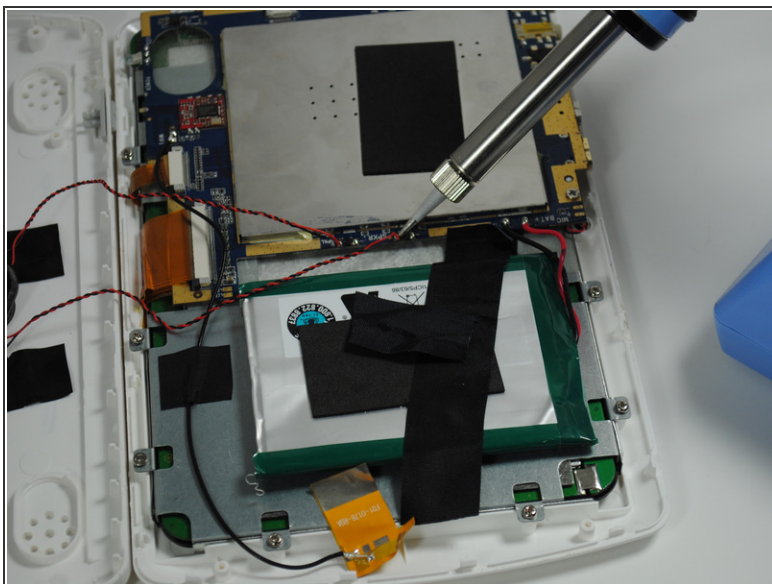

- Use a soldering station to separate the wires from the speakers.

To reassemble your device, follow these instructions in reverse order.

