




Oregon Scientific Meep! X2 Cameras Replacement

This guide shows you how to remove and replace the cameras in your Meep! X2 tablet.

Written By: J'mel Henneman

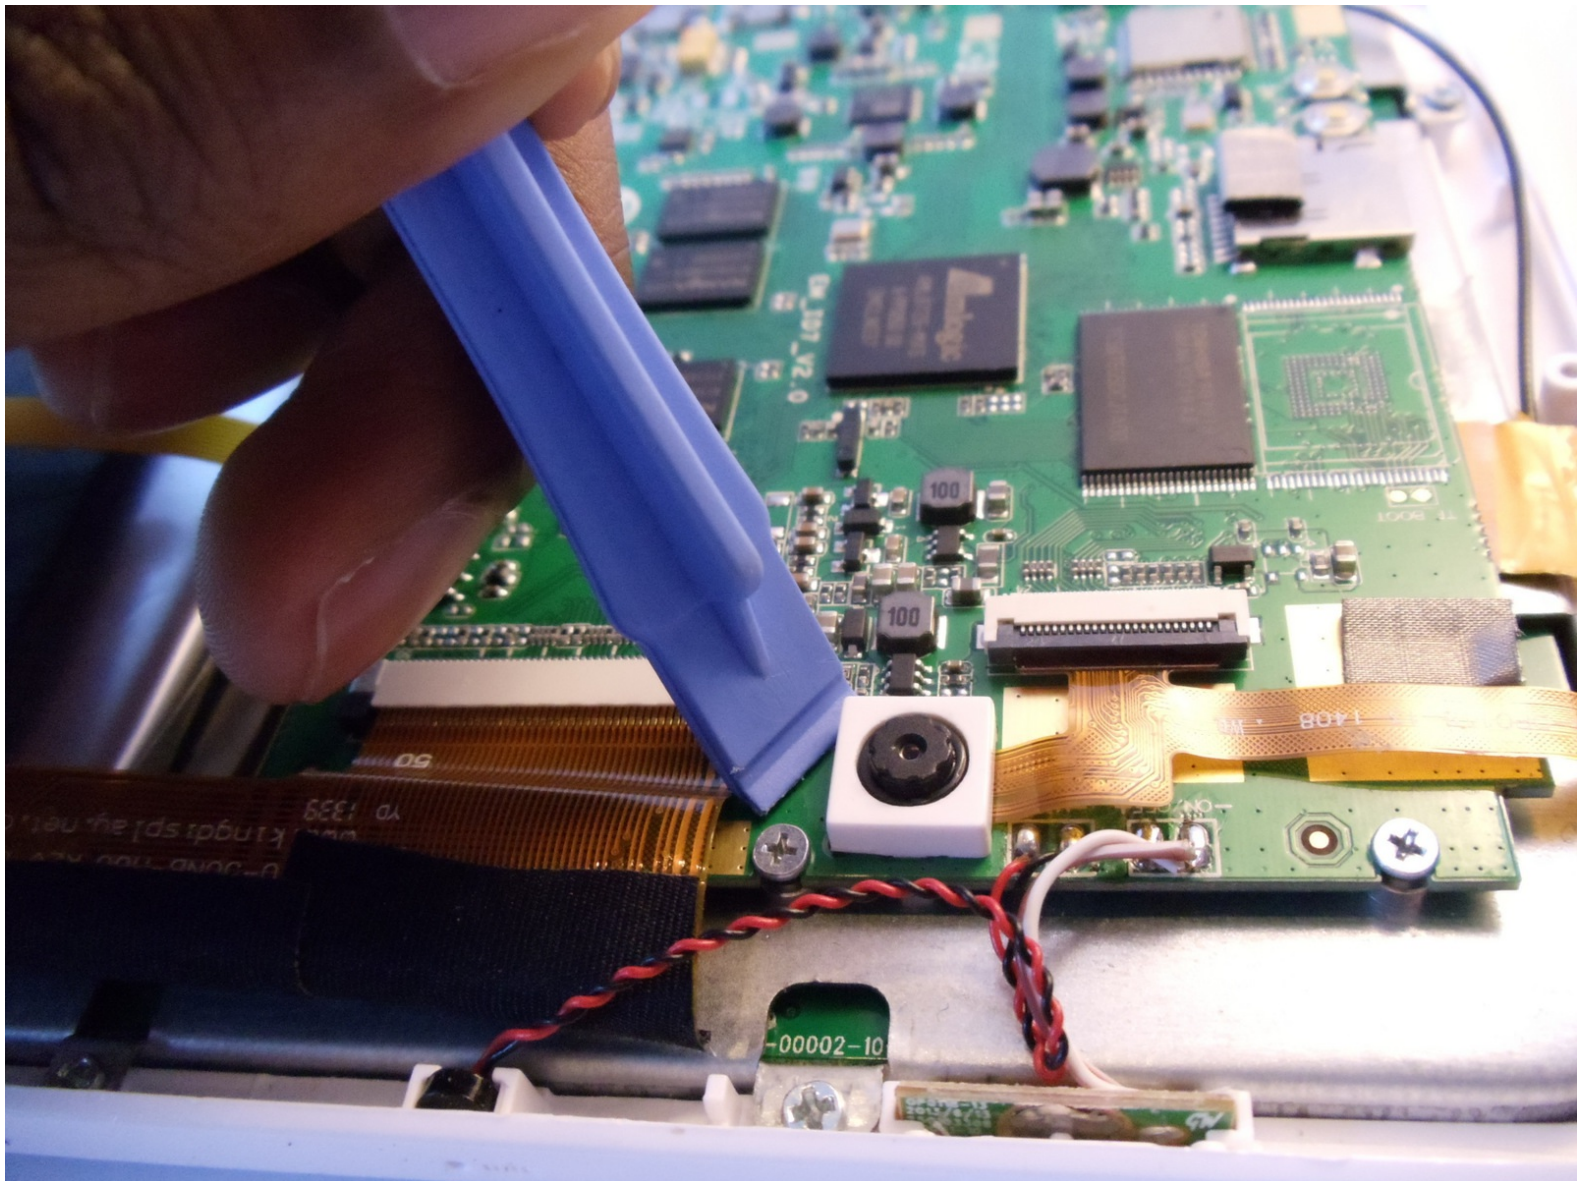

INTRODUCTION

Follow this guide in order to fix the cameras in your Oregon Scientific Meep! X2 tablet.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Casing



- Remove the orange covers from the left and right sides of the device by sliding up against the tabs.

Step 2




- You can remove the rear casing by unscrewing all six phillips #00(3.5mm x 4.5mm)screws from the left and right side of the device.

Step 3





- Use the plastic opening tools to undo the clips around the edges of the device.

Step 4 — Cameras

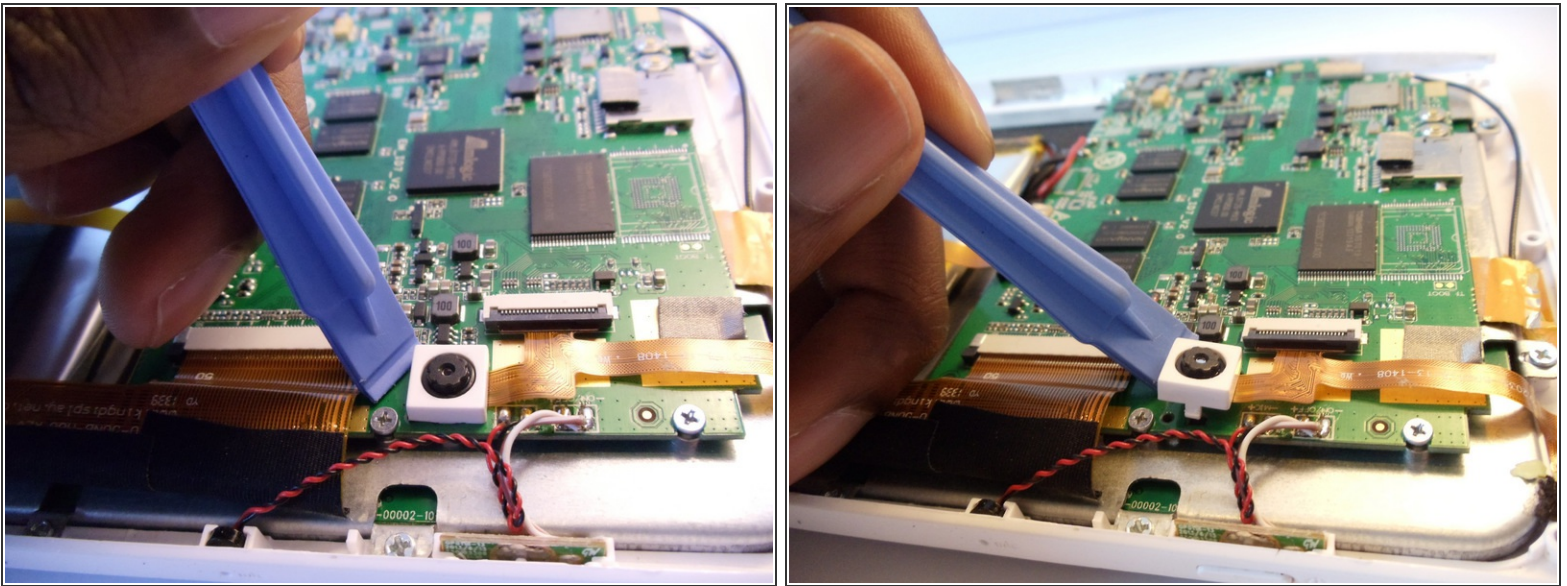


- Slip the plastic opening tool under the white, square enclosure of the camera and lift upward to unhook the camera unit from the motherboard.

Step 5

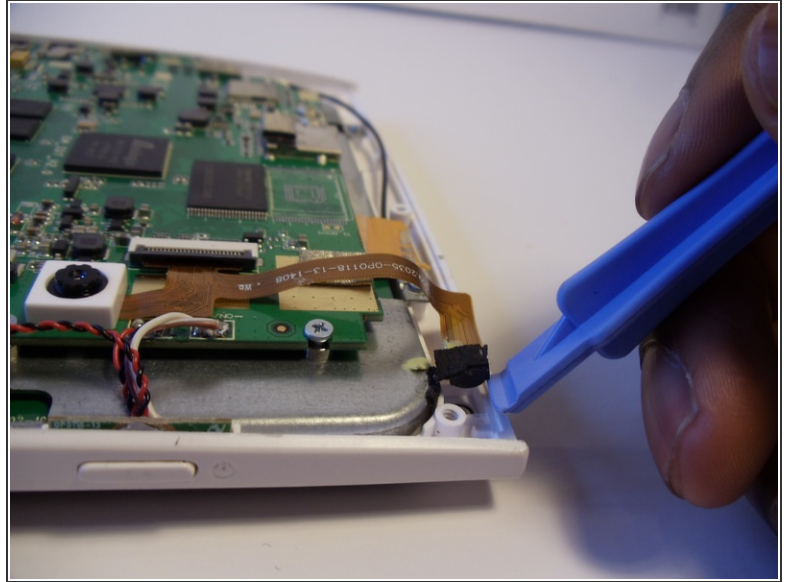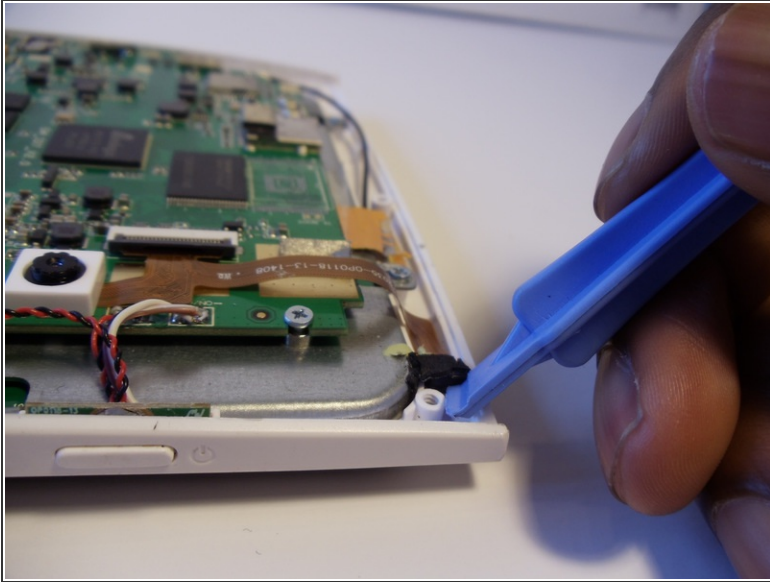

- Pry the second camera out of its slot with one of the plastic opening tools.
- ❗ Be sure to undo the black adhesive foam from the metal casing in order to remove the camera properly.

Step 6

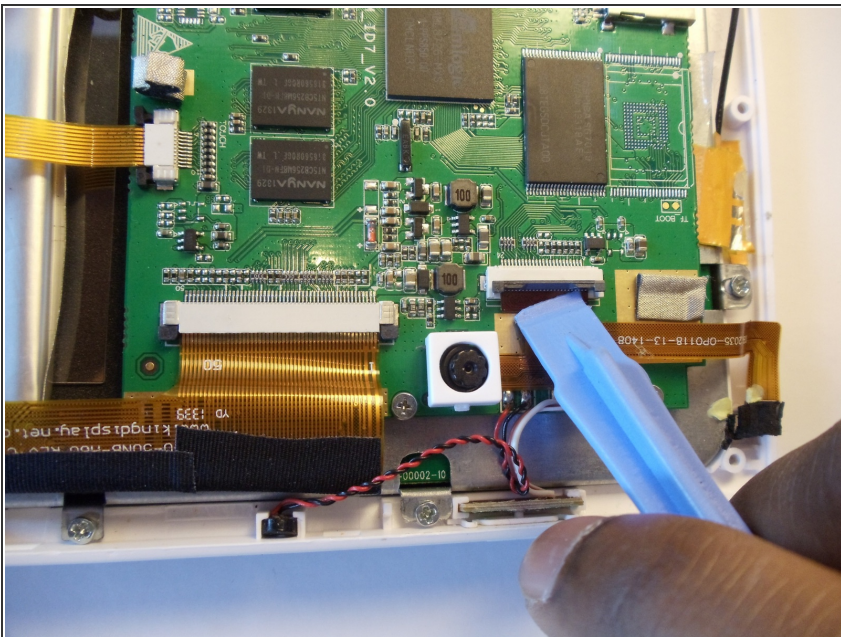

- Release the black security clip on the ribbon cable with your plastic opening tool.
- Gently disconnect the gold ribbon cable from the motherboard. The two cameras will remain attached to the ribbon cable.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 10:19:00 AM.