



Oregon Scientific Meep! X2 Power Button Replacement

In this guide we'll show you how to replace the power button on your Meep! X2 tablet.

Written By: J'mel Henneman



INTRODUCTION

Use this guide to replace a jammed or broken power button in the Oregon Scientific Meep! X2 tablet.



TOOLS:

- [Tweezers](#) (1)
 - [Soldering Station](#) (1)
-

Step 1 — Rear Casing



- Remove the orange covers from the left and right sides of the device by sliding up against the tabs.

Step 2




- You can remove the rear casing by unscrewing all six phillips #00(3.5mm x 4.5mm)screws from the left and right side of the device.

Step 3





- Use the plastic opening tools to undo the clips around the edges of the device.

Step 4 — Power Button

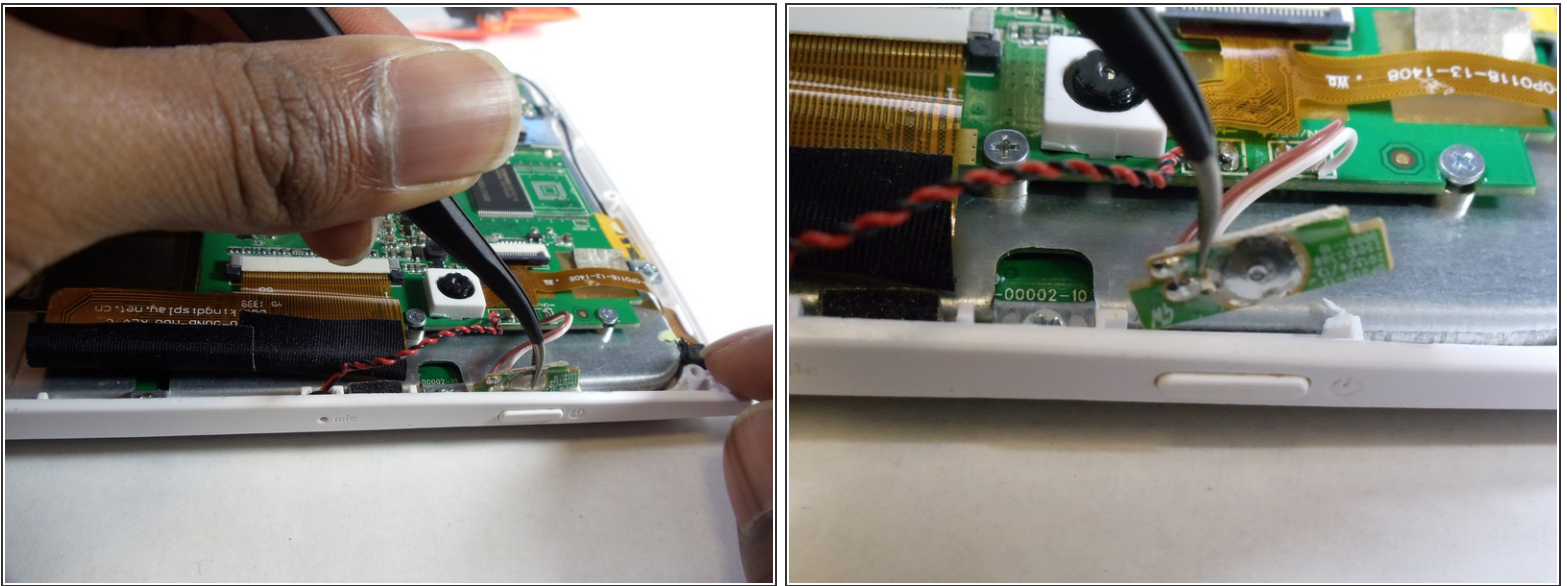


- Use a tweezer to gently pull the power button sensor out of the case's slot.

Step 5

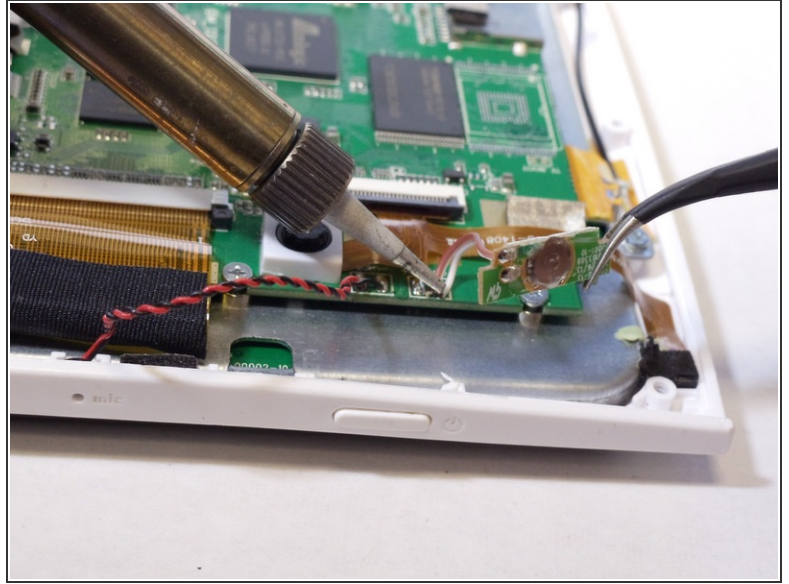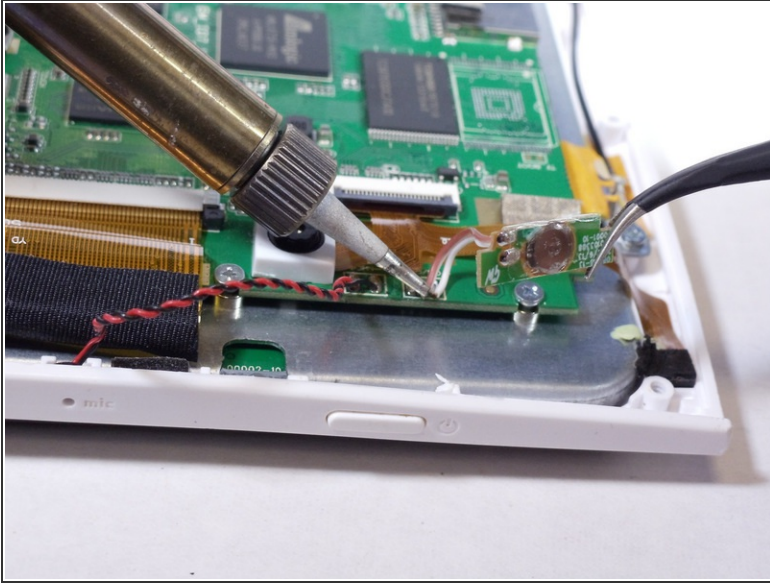

- Use the soldering station to unsolder and remove the power button from the motherboard.

 In the case of screen or screen sensor replacement, disregard desoldering steps.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-10 11:52:03 PM.