



# Oregon Scientific Meep! X2 Rear Casing Replacement

In this guide you will learn how to replace the back casing for your Meep! X2 device.

Written By: J'mel Henneman



## INTRODUCTION

This guide will show you how to replace the orange back case from your Oregon Scientific Meep! X2 tablet.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Rear Casing




- Remove the orange covers from the left and right sides of the device by sliding up against the tabs.

## Step 2

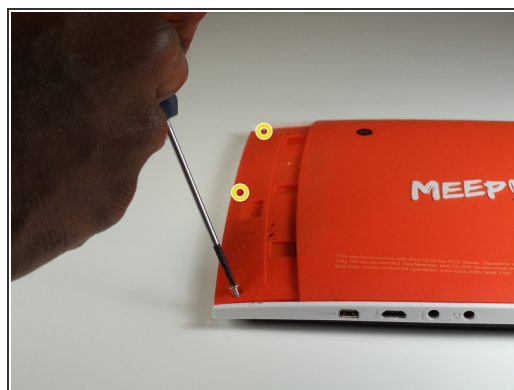

- You can remove the rear casing by unscrewing all six phillips #00(3.5mm x 4.5mm)screws from the left and right side of the device.

## Step 3

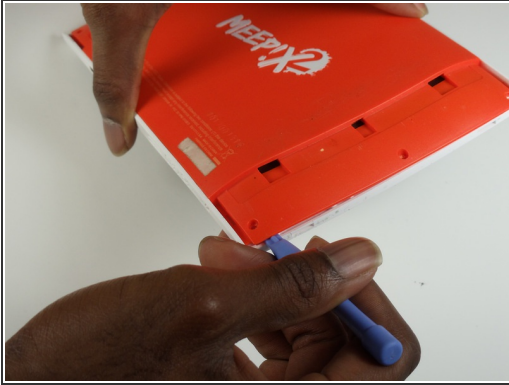

- Use the plastic opening tools to undo the clips around the edges of the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-02 08:42:07 AM.