



Tara Traveling Valve Replacement

Disassemble the traveling valve on a Tara direct action pump to replace any individual component.

Written By: Sam Lionheart



INTRODUCTION

Follow this guide to remove the traveling valve. If you wish to replace the entire valve, you will not need to follow the disassembly steps towards the end. Follow those steps if you wish to inspect, repair, or replace an individual component of the traveling valve.

Step 1 — Handle



- ✦ Before performing any repairs, perform a water test on the pump by raising and lowering the handle a full 40 strokes. A properly performing pump will yield greater than 10 liters.
- Use a Tara tool to loosen the jam nuts on either side of the pump.
- ⓘ The bolts do not need to be loosened or removed, only the nuts need to be loosened.

Step 2



- Unscrew the lock bolts about half an inch.
- ⓘ The bolts do not need to be removed from the base.

Step 3



- Pull the plastic bushing and handle straight up out of the pump.
ⓘ If the bushing doesn't come up, loosen the lock bolts further.

Step 4



- Lift up the handle and riser main until the joint between the two is at a comfortable height to work on.

Step 5




- Loosen the jam nut beneath the pump handle using the Tara tool.


Step 6



- Unscrew the pump handle from the top of the riser main.

 Make sure someone is tightly holding the lower portion of the riser main to prevent losing it down the well.

Step 7

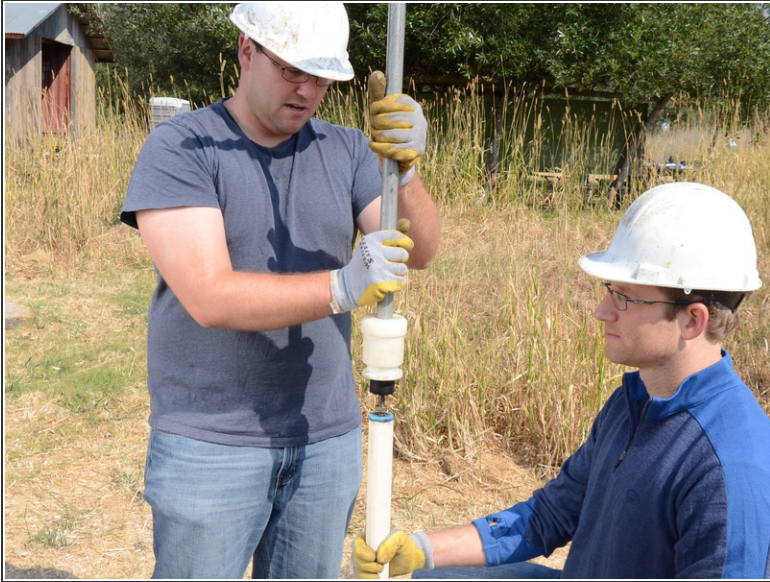

- Lift and remove the handle from the pump. Store the handle in a sanitary place to prevent contamination.

Step 8 — Pump Rod



- Screw the T-handle onto the top of the riser main.

Step 9



- Tighten the jam nut up against the base of the T-handle.

Step 10



- Use the T-handle to push the riser main back down into the well.

Step 11



- Once the riser main hits the bottom, turn the T-handle while pushing down.
- i** This will hook the foot valve onto the traveling valve, allowing you to pull the two out of the well together.
- i** You should feel some resistance if the foot valve is successfully attached.

Step 12



- Use the T-handle to pull the riser main straight up out of the well.
- i** Take care to pull up slowly to ensure the foot valve does not get released from the hook at the end of the riser main.

Step 13



- Continue pulling the riser main up from the well.
- ⓘ Pull the riser main until the base of the T-handle is at a comfortable height to work on.

Step 14



- Loosen the jam nut from the base of the T-handle.
- Unscrew the T-handle from the top of the riser main.
- Remove the T-handle, making sure to hold the remaining end of the riser main to prevent dropping it down the well.

Step 15



- Continue to pull the riser main out of the well.

Step 16



- Keep pulling until the first joint is exposed.
- ⓘ Lift the joint up to a comfortable working height.

Step 17



- Use two wrenches to loosen the top section of riser main from the lower section.
- Unscrew the top section of the riser main.
- Make sure someone is holding the remaining section of the riser main.

Step 18



- Remove the top section of the riser main.

Step 19



- Lay the first section of riser main in a sanitary place to prevent contamination.
- ⓘ Repeat the previous procedure to remove the remaining sections of the riser main from the well.
- ⓘ Lay each new piece in the order it was removed to aid in reassembly.

Step 20



- ⓘ The last section of riser main will have the traveling valve screwed on to the end, and the foot valve hooked onto the traveling valve.
- ⚠ Be careful not to allow the foot valve to release from the hook by pulling slowly on the riser main.

Step 21



- Lift and twist the foot valve to unhook it from the traveling valve.

Step 22



- Once the riser main and valves have been removed from the well, place a rag over the top to prevent accidentally dropping anything down the well.

Step 23 — Traveling Valve



- While holding onto the pump rod, use a Tara tool to loosen the jam nut from the hook.

Step 24



- Unscrew and remove the hook from the base of the pump rod.

Step 25



- Remove the jam nut from the base of the pump rod.
- Remove the washer.
- Remove the traveling valve components.

Step 26



- Check all components for signs of wear or damage.

Step 27



- When reassembling the pump, drop the foot valve down the well in the proper orientation, and follow the directions in reverse.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-04 01:14:52 AM.