




Teenage Engineering OP-1 Connector Board Replacement

Use this guide to replace the Connector Board of the OP-1, including the microphone, the line-in / line-out connectors and the USB port.

Written By: teenage engineering

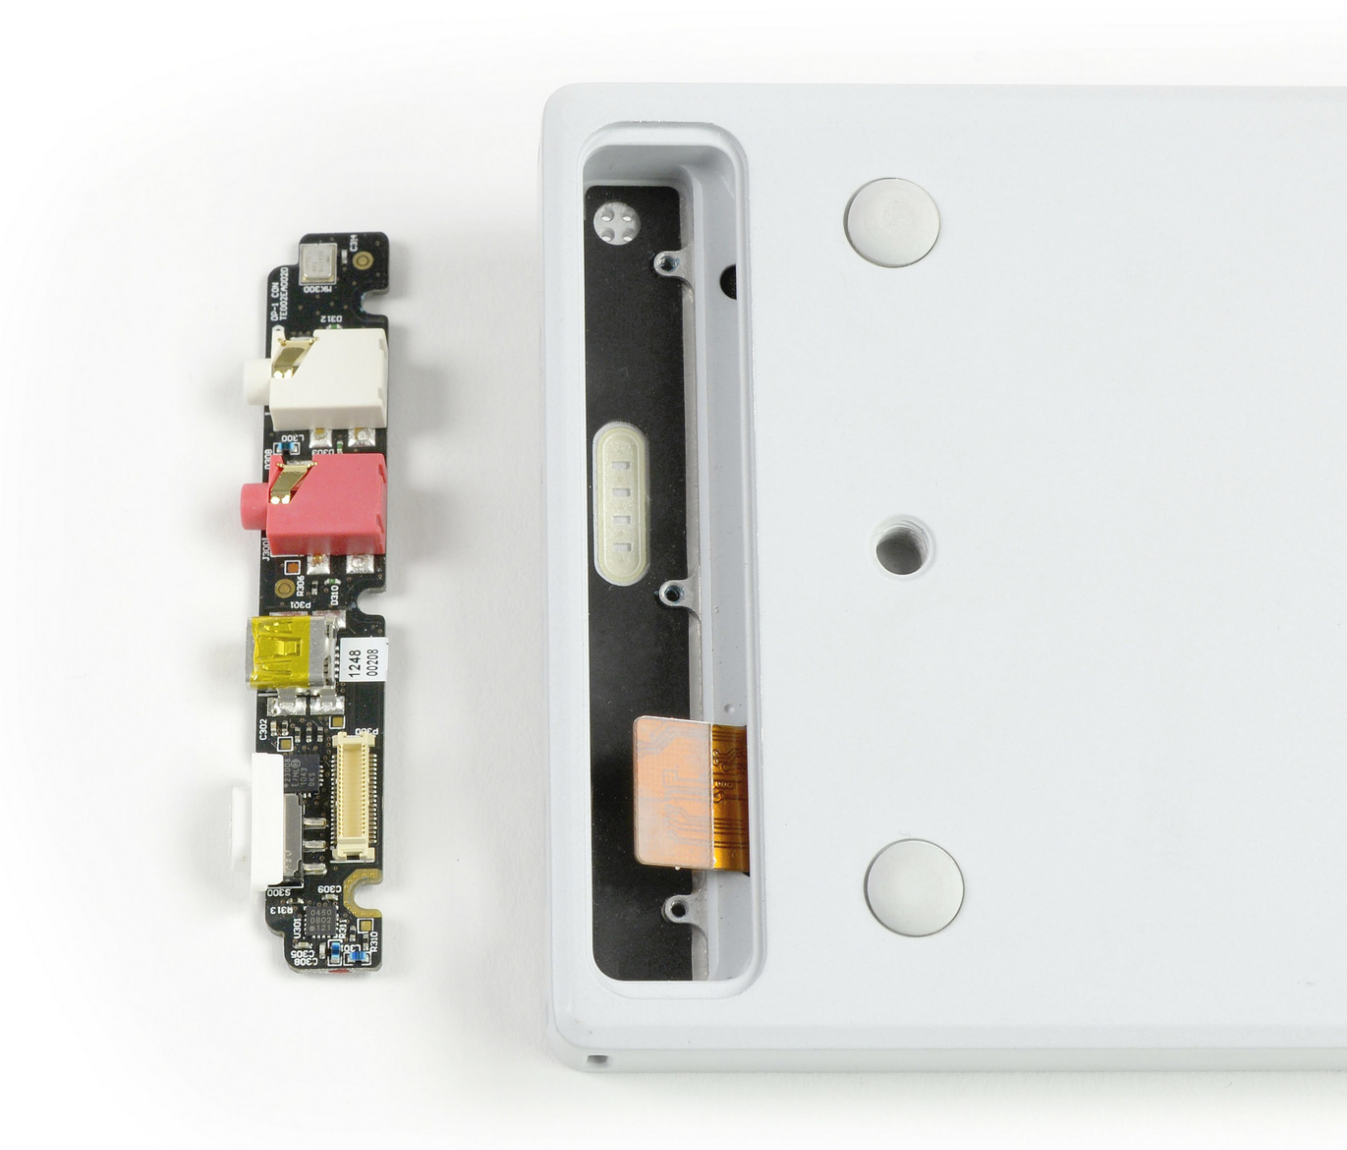

INTRODUCTION

Use this guide to replace the Connector Board of the OP-1, including the microphone, the line-in / line-out connectors and the USB port.



TOOLS:

- [Jimmy](#) (1)
- [Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [OP-1 Connector Board](#) (1)

Step 1 — Remove Back Panel





- Open the back panel by using a Jimmy on the side of the panel. Be careful not to damage the OP-1 coating.
- Lift the back panel and remove it. The Connector Board is revealed.

Step 2 — Remove Connector Board

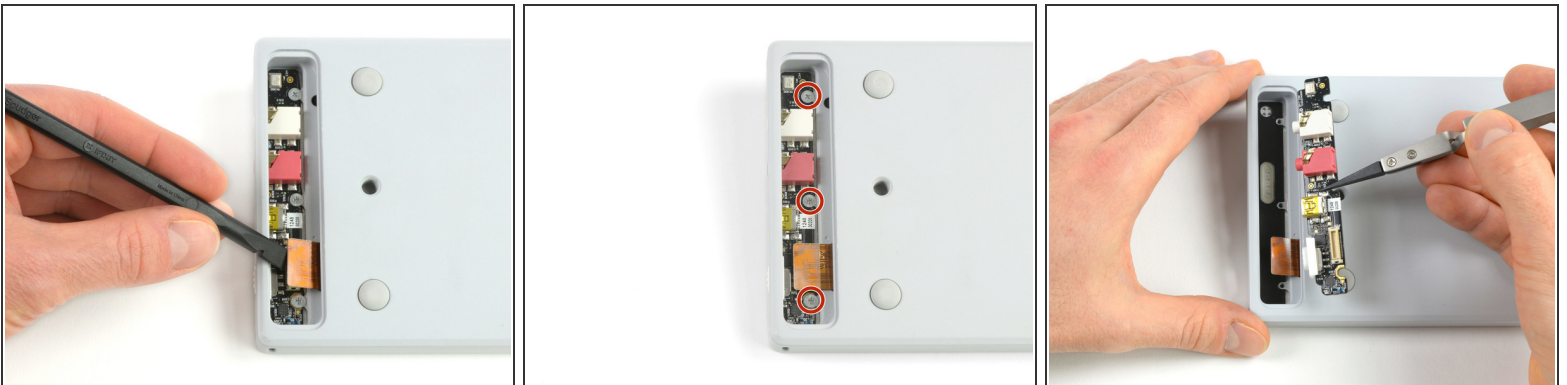

- Disconnect the flex connector by lifting it up with a spudger.
- Remove the three Phillips screws. Do not loose the washer at the bottom screw.
- Take out the connector board. Make sure to keep the black rubber pad underneath the board.

Step 3

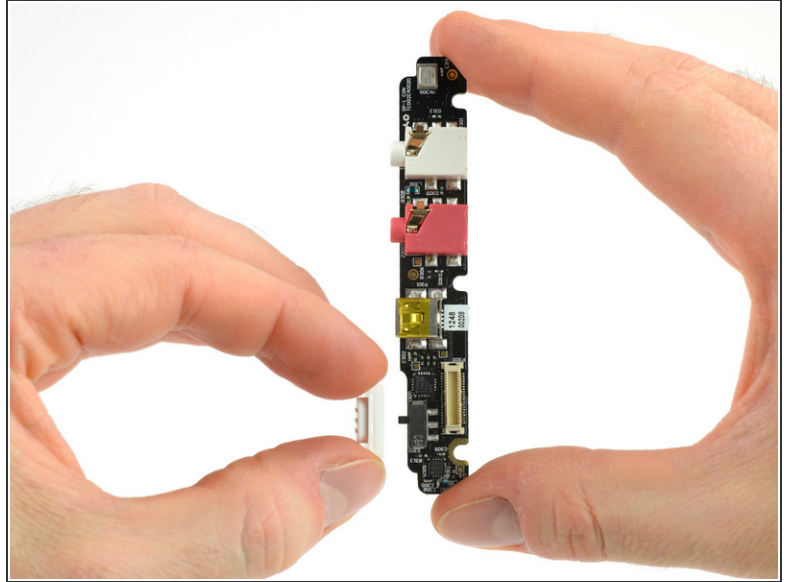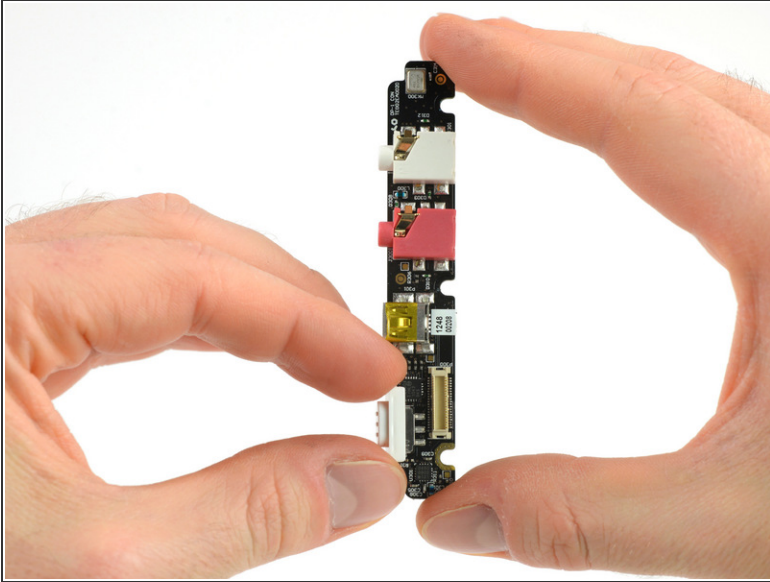

- Don't forget the cover for the on/off switch.
- Simply take it off from the old board and transfer it to the new board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 08:55:23 AM.