



# Visioneer OneTouch 7400 USB Scanner Bed Replacement

Visioneer OneTouch 7400 USB scanner bed glass replacement.

Written By: Jena



## INTRODUCTION

Use this guide to remove the glass in the scanner bed in order to replace it.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (2)

*You may need additional plastic opening tools to assist with prying.*

---

## Step 1 — Outer Case



- On the bottom of the scanner, remove the screw at the top left side.

## Step 2




- Remove the rubber foot pad opposite the screw hole to expose a second screw hole.
- Remove the screw beneath the foot-pad.



### Step 3



- Rotate the scanner so the screw hole is located on the top left hand side.
- Place the plastic opening tool between the top casement and bottom casement of scanner with the hook facing up.
- Gently pry the two casements apart beginning above the screw hole and working your way around.

 Note that the top and bottom casings are held together by a series of 6 tabs. There is one tab on each of the long sides of the scanner approximately 6 inches in from the corners. There are two tabs on each of the short sides of the scanner approximately 2.3 inches in from the corners. Use the spudger to unhook the tab from the top casement.

### Step 4





- Separate the two casement pieces.

## Step 5 — Scanner Bed



- Apply even pressure against the back of the glass while securing the plastic frame in place.

## Step 6

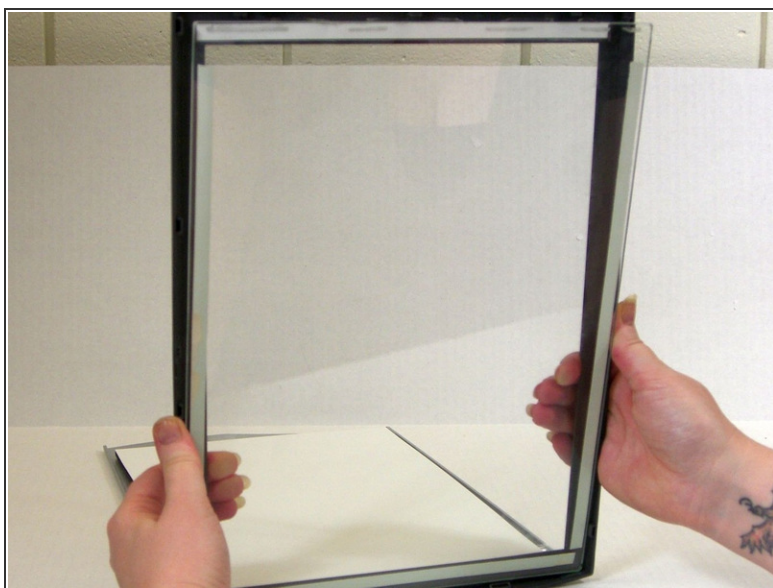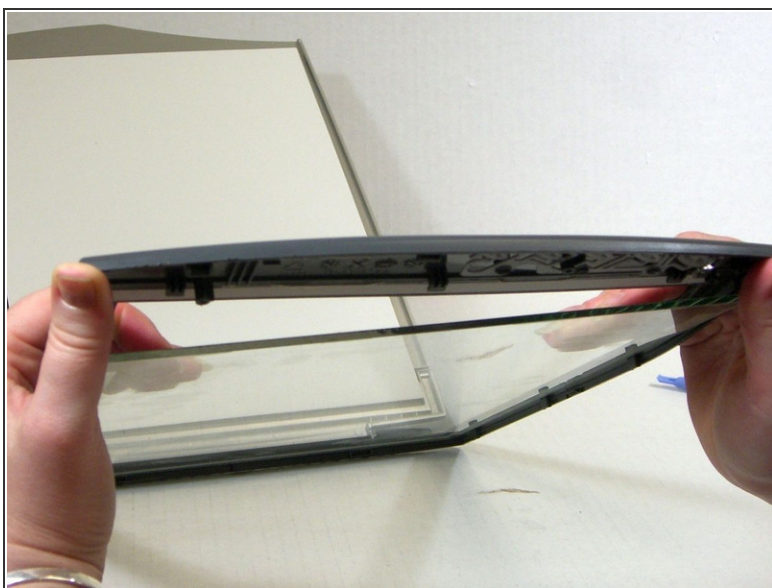

- With consistent pressure on the glass, move your fingers down the sides until the glass is no longer stuck to the double-sided tape.

To reassemble your device, follow these instructions in reverse order.

